



sonim[®] XP5s

USER GUIDE


GENERAL INFORMATION

Copyright © 2018 Sonim Technologies, Inc.
Sonim and the Sonim logo are trademarks of Sonim Technologies, Inc. Other company and product names may be trademarks or registered trade-marks of the respective owners with whom they are associated.

THIRD PARTY TRADEMARKS


Google, Android, Google Calendar, Google Now, Google Play and other marks are trademarks of Google Inc.

DISPOSAL OF OLD ELECTRICAL AND ELECTRONIC EQUIPMENT




The symbol of the crossed-out wheeled bin indicates that within the countries in the European Union, this product, and any enhancements marked with this symbol, cannot be disposed as unsorted waste but must be taken to separate collection at their end- of-life.

DISPOSAL OF BATTERY



Please check local regulations for disposal of batteries. The battery should never be placed in municipal waste. Use a battery disposal facility if available.

GUIDELINE FOR HEADPHONE AND EARPHONE



To prevent possible hearing damage, please do not listen at high volume levels for long periods.

WARRANTY



Sonim devices are covered by a 3-Year comprehensive warranty. The battery is covered by a 1-Year limited warranty.

Congratulations on the purchase of a Sonim XP5s (XP5800) mobile phone! This phone has an intuitive feature-rich user interface, which allows you to make the best use of offered functions.

PHONE MODELS COVERED

This user guide covers Sonim XP5s phone with the model number XP5800.

SONIM SUPPORT INFORMATION

For additional product and support information, visit www.sonimtech.com.

OPTIONS COMMONLY USED ACROSS MENU ITEMS

The following are common actions used across various menu items:

OK	Confirms an action. Use the Center selection key to perform this function.
BACK	Use this key to display the previous screen.
MENU	Moves the current working application to the recent applications list/background and displays menu screen.
RECENT	Displays the thumbnails of the applications that you have worked on recently. To remove any application from this list, Select Remove from list from option.

Table of Contents

GENERAL INFORMATION 2

Third Party Trademarks	2
Disposal of Battery	2
Guideline for Headphone and Earphone	2
Warranty	2
Phone Models Covered	2
Sonim Support Information	2
Options Commonly Used Across Menu Items	2

SAFETY GUIDELINES 5

Avoid High Temperatures	6
Personal Medical Devices	6
Child Safety	6
Emergency Calls	6

BATTERY USAGE 7

Inserting the Battery	7
Charging the Battery	8
Verifying and Optimizing Battery Usage	8
Tips to Extend the Battery Life	8
Disposal of Battery	8
Warning	8

YOUR SIM CARD 9

Removing the Back Cover	9
Removing the Battery	9
Inserting Memory Card	10

GETTING STARTED 11

What is in the Box?	11
Phone Specifications	11

USING YOUR SONIM XP5S 12

Setting Up Your Phone	13
Managing Home Screen	15
Key Description	15
Notification Bar Icons	15
Phone Operations Without SIM Card	16
Capturing a Screenshot	16
To Change the Phone Language	16
Text Entry Options	16
To Enter a Word	17
To Insert a Number	17
Different Metthids to Enter Text	17

HOME SCREEN MENU OPTIONS 18

My Notifications	18
Wallpaper	18
Search	18
Home Screen Shortcuts	18
System Settings	18
Manage Apps	18

QUICK SETTINGS 19

Wi-Fi	19
Wi-Fi Calling	19
Bluetooth	19
Torch	19
Airplane Mode	19
Profiles	19

MISSED EVENTS 19

MANAGING WIRELESS & NETWORK SETTINGS 20

Wi-Fi	20
Wi-Fi Calling	20
Bluetooth	21
Data Usage	21
More	21

MANAGING DEVICE SETTINGS 23

Display	23
Sound	23
Apps	25
USB Power Saving	25
Storage	25
Battery	25
Memory	25
Gesture	25

MANAGING PERSONAL SETTINGS 26

Home Screen Shortcuts	26
Emergency Info	26
Location	26
Security	26
Language & Input	27
Factory Reset	27








MANAGING SYSTEM SETTINGS 28




Date & Time	28
Accessibility	28

About Phone	28	Downloads	43
MANAGING CONTACTS	29	TOOLS	44
Adding a New Contact First Time	29	Clock	44
Adding a New Contact	29	Calculator	44
Viewing Contact Details	29	Sound Recorder	44
Sending a Message from Contacts	29	SIM Toolkit	45
Dialing a Number from Contacts	29	OTHER APPLICATIONS	46
Editing the Contact Details	29	Camera	46
Managing Contact Settings	31	Gallery	46
Deleting a Contact	31	REGULATORY INFORMATION - USA	
MANAGING CALL SETTINGS	32	MARKET	47
Making a Call	32	RF Exposure Information (SAR)	47
Dialing a Number via Contact	32	Federal Communication Commission Interference Statement	47
Adding a Contact from Home Screen	32	FCC Caution	47
Viewing Call History	32	ISED RF Exposure Statement (IC)	48
Deleting Call History	32	HAC Rating	48
Speed Dial Settings	32	HAZARDOUS LOCATION USAGE	
Call Settings	32	WARNING	49
Changing Ringtones and Master Volumes	33	INDEX	50
SENDING MESSAGES	34		
Sending SMS/MMS Message	34		
Search	34		
Emergency Alerts	34		
Message Settings	35		
Deleting Messages	35		
LINC PTT SERVICES	36		
Initial Linc PTT Setup	36		
Linc PTT	36		
Linc Messages	39		
SONIM SCOUT	41		
Setup	41		
Utilities	41		
Support	41		
APPLICATIONS	42		
Browser	42		
Calendar	42		
Music	42		
FM Radio	42		
File Explorer	43		
Backup and Restore	43		

SAFETY GUIDELINES

Please read and understand the following safety guidelines before you use the phone. These guidelines provide details to enable you to operate your phone safely and conform to any legal requirements regarding the use of cellular phones.

	Do not to use the phone at a refueling point. Observe restrictions when using radio equipment at fuel depots, chemical plants or where blasting operations are in progress.
	Electrical interference may obstruct the use of your phone. Observe restrictions in hospitals and near medical equipment.
	Switch off your cellular phone when in an aircraft. Wireless phones can cause interference or danger to an aircraft. In an aircraft, the phone can be used in flight mode.
	Do not expose the device to high temperatures (in excess of 55°C).
	Adhere to road safety laws. Do not hold/ use a phone while you are driving; find a safe place to stop first. Use hands-free microphone while you are driving.
	Avoid using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.
	Use only Sonim XP5800 approved charging equipment to charge your phone and avoid damage to your phone.

	The symbol of the crossed-out wheeled bin indicates that this product, and any enhancements marked with this symbol, cannot be disposed as unsorted waste but must be taken to separate collection at their end-of-life.
	Ensure that only qualified personnel install or repair your phone.
	<p>The Sonim XP5800 device is waterproof and can be submerged to 2 meters for 30 minutes.</p> <p>If your device gets wet, please dry the SecureAudio Connector and XPand Connector ports to prevent the deposit of water droplets on the connectors.</p> <p>Water droplets may condense under the display cover if the phone is immersed in water with a significant drop in temperature. This does not indicate water leakage and the droplets will disappear when the display reaches room temperature.</p> <p>The Sonim XP5800 is dust-resistant, rugged and shock-resistant. However, it is not dust-proof or unbreakable if subjected to overwhelming impact. For best results and long product life, one should protect the Sonim XP5800 from salt water, dust and strong impacts.</p>

AVOID HIGH TEMPERATURES

Leaving the device in hot or cold places, such as in a closed car in summer or winter conditions, reduces the capacity and lifetime of the battery. For the best results, try to use the device between -20°C and +55°C (-4°F and 131°F). A device with a hot or cold battery may not work temporarily, even when the battery is fully charged. Battery performance is particularly limited in temperatures well below freezing.

PERSONAL MEDICAL DEVICES

Mobile phones may affect the operation of cardiac pacemakers and other implanted equipment. Please avoid placing the mobile phone over the pacemaker, for example in your breast pocket. When using the mobile phone, place it at the ear opposite the pacemaker. If a minimum distance of 15 cm (6 inches) is kept between the mobile phone and the pacemaker, the risk of interference is limited. If you suspect that interference is taking place, immediately turn off your mobile phone. Contact your cardiologist for more information. For other medical devices, consult your physician and the manufacturer of the device. Comply with instructions to switch off the device or deactivate the RF transmitter when required, especially when posted in hospitals and airplanes. Equipment used in these places may be sensitive to radio waves emitted from the device and adversely affect their operation. Also, observe restrictions at gas stations or other areas with flammable atmosphere or when close to electro-explosive devices.

CHILD SAFETY

Do not allow children to play with your mobile phone or its accessories. Keep it out of their reach. They could hurt themselves or others, or could accidentally damage the mobile phone or accessories. Your mobile phone and its accessories may contain small parts, which could be detached and create a choking hazard.

EMERGENCY CALLS

Mobile phones operate using radio signals, which cannot guarantee connection under all conditions. Therefore you should never rely solely upon any mobile phone for essential communications (e.g. medical emergencies). Emergency calls may not be possible in all areas, on all cellular networks, or when certain network services and/or mobile phone features are in use. Check with your local service provider.

WARNING



It is not permissible to connect any external devices to all ports/interface (USB, XPand and SecureAudio Connector) in Hazardous area.

BATTERY USAGE


Sonim XP5s phone comes with a removable battery. For any battery related queries, contact Southern Linc Customer Support.

- Use only a Sonim XP5800 certified battery that is designed for this phone model.
- The use of other batteries may void the warranty terms of your phone and cause damage.
- It is recommended to protect the battery from extreme temperature environments and moisture.
- Please keep the battery out of the reach of children.

INSERTING THE BATTERY


1. UNSCREW COVER

To open the battery cover, rotate both the battery cover screws in a counter clockwise direction (as shown in the figure). Sometimes, the battery cover may be tight and some extra effort is required to open it. You can use the screwdriver provided to open the screws.

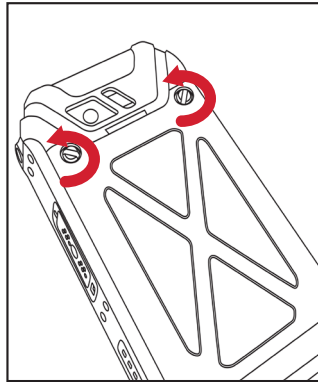


2. LIFT THE COVER

Lift the back cover to reveal the battery slot.

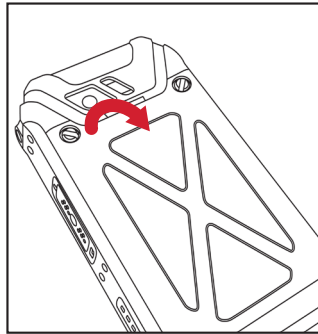


3. INSERT BATTERY

Insert the battery and flush into the battery slot such that the three metallic contacts at the top of the battery are aligned with the metallic contacts within the battery compartment.

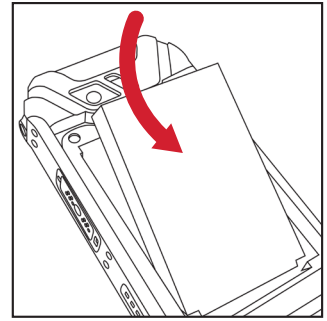

• CLOSE COVER

Close the battery cover. Rotate the battery cover screws in clockwise direction. You can use the screwdriver provided to tighten the screws. Ensure not to over-tighten the screws.

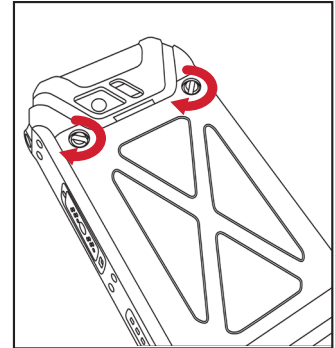

CHARGING THE BATTERY

The battery delivered with your mobile phone is not fully charged. We recommend that you charge your mobile for 5 hours before you use your mobile phone for the first time.



Only the power supplies with outputs meeting the SELV requirements can be used for charging. The maximum allowable input voltage for the phone is 9v.



There is a risk of explosion while charging if the battery has been replaced by an incorrect type.



If the battery is completely out of charge, it can take several minutes for the charging icon to appear when the charger is connected.

1. INSERT CHARGER

Insert the charger plug into a power outlet.

2. CONNECT TO THE PHONE

The charging port is located in the lower side of the phone, below the back cover. Insert the charger connector to the charging port.

3. CHARGING ANIMATION/ICON

- If the battery is being charged when the phone is switched off, a battery charging animation with current battery level is displayed.
- If the battery is being charged while the phone is switched on, the battery icon on the status bar shows the animation indicating that the battery is being charged.
- After the battery is fully charged the charging animation stops and you can disconnect the charger from the phone. A message is displayed as **Battery is full**. **Please unplug the charger.**



VERIFYING AND OPTIMIZING BATTERY USAGE

You can check the battery usage status and also close some applications to save battery power. In the all application screen, select **Settings** (⚙️) > **Battery** (🔋).

The current battery level (charging or not charging) is displayed on the top of the screen. The discharge graph on the top of the screen shows the battery level over time since you last charged the device, and how long you have been running on battery power.

The list at the bottom of the screen shows the breakdown of battery usage for individual apps and services. Select any listed items for more details. The details screen for some apps includes buttons that allow you to adjust settings affecting power usage, or stop the application completely.



If you stop some apps or services, your device may not work correctly.

TIPS TO EXTEND THE BATTERY LIFE

Follow these tips to extend your phone's battery life.

- If you are not using Wi-Fi, Bluetooth, or GPS, use the **Settings** to turn them off. The GPS setting is located in **Settings > Personal > Location**.
- Set screen brightness to **Low** and set a shorter Sleep timeout (15 seconds). The display settings are located in **Settings > Device > Display**.
- If you are travelling and do not have access to mobile data or Wi-Fi network, switch to Airplane mode. Select **Airplane mode** from **Quick Settings**.

DISPOSAL OF BATTERY



Please check local regulations for disposal of batteries. The battery should never be placed in municipal waste. Use a battery disposal facility if available.

WARNING



THE BATTERY SHOULD ONLY BE REPLACED IN A NON-HAZARDOUS LOCATION.

YOUR SIM CARD

The SIM card associates your network services (for example, phone number, data services etc.) with your phone.


The Sonim XP5s device comes with two SIM card trays. Following are the three different scenarios for both the SIMs:

1. **When both the SIM cards are inserted:** At the time of every boot up, a warning/pop-up message is displayed **Device has detected two SIM cards, SIM in Slot 2 will be disabled.** Press **OK** to confirm. SIM with Slot 1 is enabled and SIM in slot 2 is disabled.
2. **When Only SIM in Slot 1 is inserted:** There is no warning/pop-up message is displayed and SIM in slot 1 is active/enabled.
3. **When Only SIM in Slot 2 is inserted:** There is no warning/pop-up message is displayed and message SIM in Slot2 is active/enabled.

REMOVING THE BACK COVER


1. UNSCREW COVER

To open the battery cover, rotate both the battery cover screws in counter clockwise direction using the Sonim provided screwdriver tool (as shown in the figure).

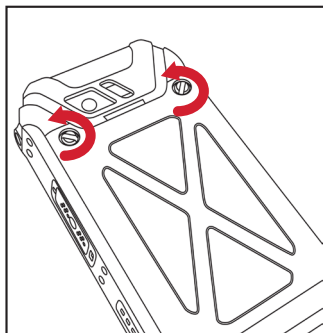

2. LIFT THE COVER


Lift the back cover to reveal the battery.

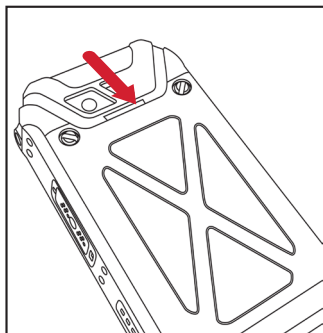

REMOVING THE BATTERY


1. UNSCREW COVER

To open the battery cover, rotate both the battery cover screws in an counter clockwise direction using the Sonim provided screwdriver tool (as shown in the figure).

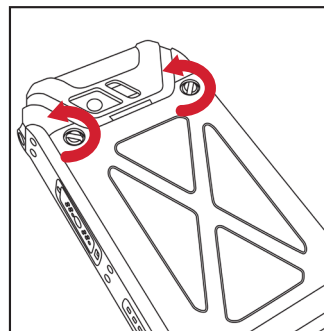


2. LIFT THE COVER

Lift the back cover to reveal the battery slot.

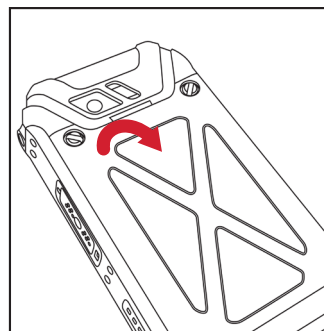

3. REMOVE THE BATTERY


After removing the back cover, life the battery from the battery compartment.

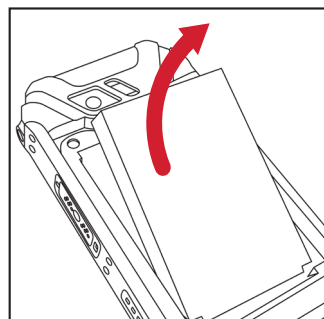

INSERTING MEMORY CARD


1. SLIDE THE SILVER CLIP

Slide (push forward) and lift the silver clip over the designated slot located beside the SIM card slot. (as shown in the figure).

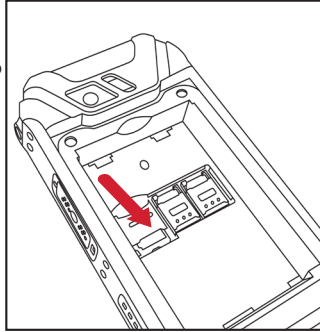


2. PLACE THE MEMORY CARD

Place the memory card in the designated slot and close the silver cup. (as shown in the figure).

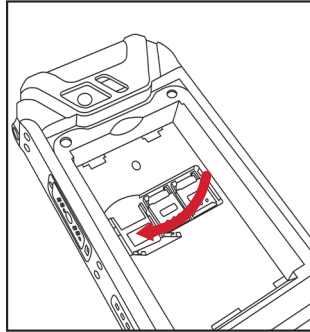

3. CLOSE THE BATTERY COVER

Use Sonim provided screwdriver and tighten the screws on the back cover.

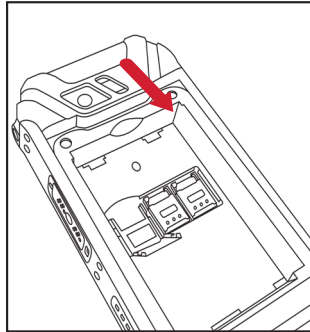

GETTING STARTED

WHAT IS IN THE BOX?

The list of items in the Sonim XP5s phone box are:

- Sonim XP5s
- Battery
- Wall Charger
- USB-C Cable
- Screwdriver
- Quick Start Guide

PHONE SPECIFICATIONS

FEATURE	DESCRIPTION
Chipset	Qualcomm MSM8920
Band	LTE: B1/B2/B3/B4/B5/B7/B8/B12/B13/B14/B25/B26/B28/B30/B38/B41/B66
Antenna	MIMO antenna for LTE
Wi-Fi	Support 802.11 a/b/g/n/ac/e/k/r/h Support max 10 connections hotspot
Memory	16GB eMMC + 2GB DDR
CONNECTIVITY	
Bluetooth	BT4.x with BLE
SMS/MMS	BLESupport SMS and MMS
GPS	GPS/aGPS, GLONASS, BDS
Languages Supported	English and Spanish
Capacity(mAh)	3180mAh, removable Li-ion
Battery Life	Standby: up to 267 hours Talk time: up to 19 hours Music playback: up to 59 hours Video playback: up to 8.5 hours Web browsing: up to 7.5 hours
PHYSICAL CHARACTERISTICS	
Ambient temperature	-20°C to +55°C
Protection Class	IP-68, 2meters for 1 hour
Size	141mm x 63.9 mm x 23mm
Weight	approx. 260 gms

FEATURE	DESCRIPTION
Dedicated keys	PTT Key/Alarm Key/Power Key
Ports	Water-proof USB2.0 type-C, High Speed, OTG
DISPLAY	
Size	2.64"
Resolution	432x320 Transmissive, 350 nits Brightness
Outdoor Visibility	Yes
Capacity	262 K colors
AUDIO	
Microphone	3 Mics with noise cancellation
Speaker	Front Dual Loud Speaker, Support HD voice and wideband
MULTIMEDIA	
Audio Formats	AMR-NB, AMR-WB, AAC, AAC+, AAC+V2, MP3,V-SELP, AMR 12.65, AMR 6.6
Video Formats	3GP,MP4, WMV, AVI, MOV, MPEG-2, MPEG-4,H.263, H.264
FM Radio	Yes
Camera	5MP FF Rear camera, No front camera
LED Torch Light	Yes, also used for camera flash
NON-INCENDIVE	
Class 1, Division 2, Groups A-D T4	
Class II and III, Division 2, Groups F and G	
-20°C ≤Tamb ≤ + 55°C	

USING YOUR SONIM XP5S



1. Sonim XPand Connector
2. Microphones
3. USB-C
4. Volume Up / Down
5. PTT Button
6. App Tray
7. Options
8. Clear
9. Answer / Accept
10. Voicemail (Press and Hold)
11. Lock Keypad (Press and Hold)
12. Select / Center key
13. Navigation
14. End / Reject / Power On & Off (Press and Hold)
15. Speakerphone

16. Back
17. Display
18. Battery Level Indicator
19. Notification Bar
20. Receiver
21. LED Notification
22. Sonim SecureAudio Connector
23. Emergency Button
24. Charging Pins
25. Battery Under Door
26. SIM Card Slots Under Battery
27. Memory Card Slot Under Battery
28. Battery Door
29. Rear Flash
30. Rear Facing Camera

SWITCHING ON THE PHONE

Press and hold **ON/OFF** Red button for 2 seconds.

When the phone is switched on, it tries to register with the network. After successful registration, the name of the service provider is displayed.



Ensure that a valid SIM card is inserted in your phone.

SETTING UP YOUR PHONE


For instructions on using your phone's buttons, charger, battery, and other hardware features, check the printed Quick Start Guide provided along with your phone.

To setup your phone, follow the screens displayed on the your device:

1. On initial setup screen, select **START PROVISIONING** to provision your device ot select **SKIP** to go to the next screen.




2. On **Import Contacts** screen, select **OK** to import contacts using **Contact Transfer** application or select **SKIP** to go to the next screen.




Do you want to import contacts using ContactTransfer application?




3. **My Information** is displayed. Enter the details and select **SKIP** to go to the next screen.

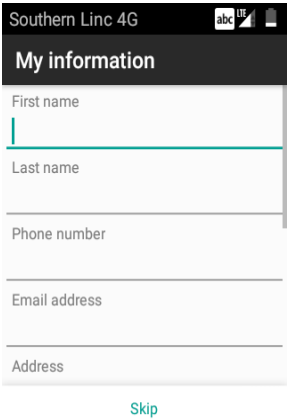


4. On **Emergency Information** screen, select **Add > Select contact/Add new** to add emergency information. Select **SKIP** to go to the next screen.

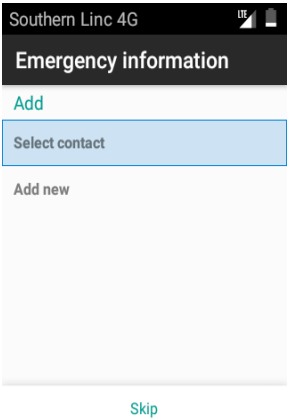


5. You can setup Wi-Fi on your device using the below screen. By connecting to the Wi-Fi, you can connect to web and enable Wi-Fi Calling on your device. Select **SETUP** to setup the Wi-Fi or **SKIP** to go the next screen.

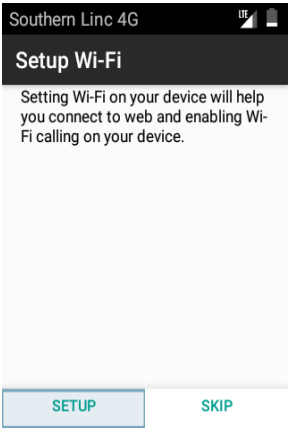


6. On **PTT onBoarding** screen, read the instructions carefully to setup PTT. Select **DONE** to go to the screen.

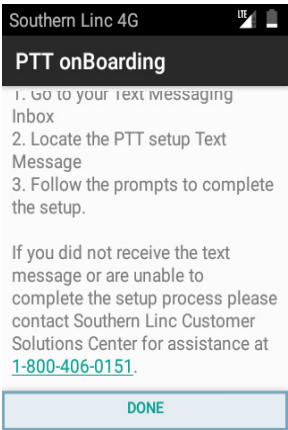


7. Select **AGREE** on **Location consent** screen to enable hardware acceleration to collect location data.

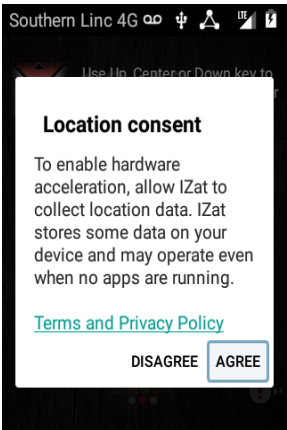

8. You can use Up, center or Down key to access assigned application or function.

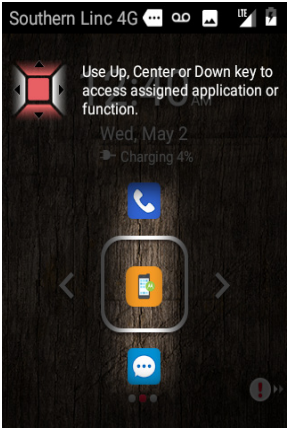


9. You can use Left and Right key to access Quick Settings and Miised Events.

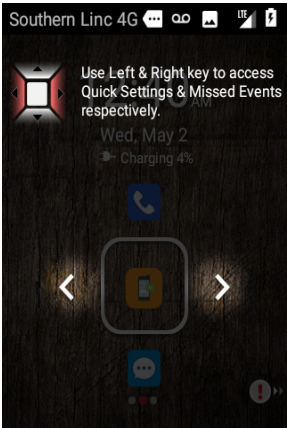

MANAGING HOME SCREEN

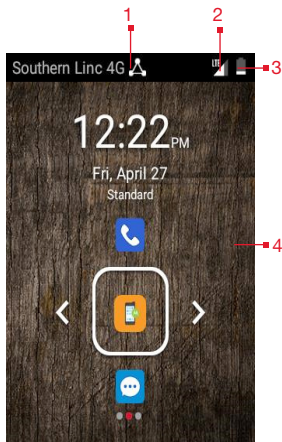



After you complete the phone setup, the home screen is displayed. The home screen is the beginning point to access all the device's features.





1. Alert Notification
2. Service Indicator and Signal Strength Bar
3. Battery Charge Indicator
4. Home Screen

KEY DESCRIPTION

The navigation keys are located below the display screen.

ICONS	DESCRIPTION
	Back: Opens the previous screens in the working sequence till the home screen is displayed. Once the home screen is displayed, it remains there even when you press the back key.
	Menu: Always positioned in the center of the keypad. Select it to view all the installed applications and device settings.
	Option: Displays the options for the currently active screen.
	Clear: Clears the entered text and deletes the selected file.








ICONS	DESCRIPTION
	Speaker: You can place the call on speaker and this icon is enabled only when call is on the speaker.
	For better result in a noisy environment, hold the device 15-20 cm from your mouth while speaking on a speaker mode. Clears the entered text and deletes the selected file.




















The **Notifications** on the top of the display screen provides details about various notifications such as missed calls, new messages and missed alarms.

The **System Icons** on the right display the current device status such as wireless and network connection strength and battery level.

NOTIFICATION BAR ICONS

The icons displayed at the top of the screen provides information about the status of the device. The details such as battery charge status, and data service are displayed when the phone is in standby mode. Other indicators such as Bluetooth connectivity status, airplane mode, alarm and call forward (only if Always forward is enabled) and Wi-Fi connectivity are displayed, if the feature is activated.

ICONS	DESCRIPTION
	Notification
	Battery level indicator
	Battery charging in progress
	No signal
	Signal strength
	No SIM card
	4G LTE network connected

ICONS	DESCRIPTION
	Wi-Fi connected
	Bluetooth activated
	Call in progress
	Speaker icon
	FM Radio
	Missed call
	New SMS or MMS
	Alarm activated
	Silent mode activated
	Vibration mode activated
	Headset connected
	Missed Events notification
	Airplane mode activated
	Error/information notification - attention required
	Screenshot captured
	Music is playing
	Device storage space is running out
	Warranty Registration icon
	Voice over WiFi


PHONE OPERATIONS WITHOUT SIM CARD

You can perform the following operations without inserting a SIM card in your phone.

- Make an emergency call.
- View and modify all settings except data usage and mobile network related settings.
- Activate and share files through Bluetooth.
- Access the Internet using Wi-Fi connectivity.
- Access your phonebook, File explorer multimedia files, all tools and applications.
- View and modify your profile settings.

CAPTURING A SCREENSHOT

You can take the screenshot of the current screen and it is stored in your phone's gallery. To take a screenshot:

1. Ensure that the image to be captured is displayed on the current screen.
2. Press the Power and Volume down button simultaneously. The screenshot is captured and stored in the gallery. A screen **Capture** () icon is also displayed on the notification bar.

TO CHANGE THE PHONE LANGUAGE

1. When you enter the text message, you can change the device language by press and hold the * key.
2. You can change the **Language** from **English** to **Espanol** and vice versa.

TEXT ENTRY OPTIONS

When you enter the text message, you can change the text entry options by pressing the # key. The current text entry options are displayed in the top bar.

The various text entry options are:

- **For English:**
 - **ABC:** Enter all the text in upper case.
 - **Abc:** Enter the first letter of the sentence in upper case
 - **abc:** Enter all the text in lower case.
 - **123:** Enter the numbers.
- **For Espanol:**
 - **ESABC:** Enter all the test in upper case (capitalized).
 - **ESabc:** Enter all the text in lower case.
 - **ESAbc:** Enter the first letter of the sentence in upper case.
 - **123:** Enter the numbers.

TO ENTER A WORD

1. Start by pressing the numeric keys from 2 through 9 only once for the required letter.
 - **Ex 1:** To enter the word Good, press 4-6-6-3. The word displays on the screen as you type.
 - **Ex 2:** To enter the word Hello, press 4-3-5-5-6. The word displays on the screen as you type.
2. If the word does not display correctly, press right navigation key to scroll through alternative word choices. Press either the center navigation key or 0 key to accept the word.

TO INSERT A NUMBER

1. Press the key labeled with the number you want and use the navigation key to scroll to that number as above.
2. To insert a symbol, press and hold the numeric key 1 and use the navigation key to scroll and select a symbol.

DIFFERENT METHODS TO ENTER TEXT

When English is selected as input language:

- **T9ABC:** Enter the text based on the T9 dictionary. All the letters is in upper case (capitalized).
- **T9Abc:** Enter the text based on the T9 dictionary. Only the first letter of the sentence is in upper case (capitalized).
- **T9abc:** Enter the text based on the T9 dictionary. All the letters are in lower case.

When Espanol is selected as input language:

- **T9ESABC:** Enter the text based on the T9 dictionary. All the letters is in upper case (capitalized).
- **T9ESAbc:** Enter the text based on the T9 dictionary. Only the first letter of the sentence is in upper case (capitalized).
- **T9ESabc:** Enter the text based on the T9 dictionary. All the letters are in lower case.

HOME SCREEN MENU OPTIONS

In order to see the details about any notifications, on the home screen, select **Options key**.

The following options are displayed:

- My Notifications
- Wallpaper
- Search
- Home Screen Shortcuts
- System Settings
- Manage Apps

MY NOTIFICATIONS

The left-hand top on your device is where your applications and message services can send a notification that there is something new to look at, e.g. missed calls, new messages and downloads.

WALLPAPER

You can set an image or a photo stored in your phone as your home screen wallpaper or select from the available apps.

To change the wallpaper, select from one of the following **Wallpaper** collections.

From Home screen, press **Options key > Wallpaper**. Select wallpaper from the popup.

- **Gallery:** includes photos and screenshots taken using the phone's camera.
- **Wallpapers:** includes images that are pre-loaded with the phone.

SEARCH

You can search for people, places, music, movies and many more. Enter the key word in the search bar and the list is displayed.

HOME SCREEN SHORTCUTS

The navigation **Up**, **Center** and **Down** keys are displayed.

For more information, refer to "Home Screen Shortcuts" on page 26.

SYSTEM SETTINGS

System settings refers to the following settings:

- "Managing Wireless & Network Settings" on page 20
- "Managing Device Settings" on page 23
- "Managing Personal Settings" on page 26
- "Managing System Settings" on page 28

MANAGE APPS

You can manage application and force stop them. For more information, refer to "App" on page 25.

QUICK SETTINGS

In order to see the quick settings, on the home screen, select **Left Navigation key**.

The following settings are displayed:

- Wi-Fi
- Wi-Fi Calling
- Bluetooth
- Torch
- Airplane Mode
- Profiles

These settings can be enabled or disabled.

WI-FI

You can enable or disable Wi-Fi settings. For more information refer to "Wi-Fi" on page 20.

WI-FI CALLING

You can enable or disable Wi-Fi Calling settings. For more information refer to "Wi-Fi Calling" on page 20.

BLUETOOTH

You can toggle between **ON** and **OFF**. For more information, refer to "Bluetooth" on page 21.

TORCH

You can set the **Torch ON** and **OFF**.

AIRPLANE MODE

Toggle the button to enable or disable the airplane mode. For more information, refer to "Activating Airplane Mode" on page 21.

PROFILES

You can select the profile from the list:

- Standard
- Outdoor
- Silence
- Meeting

For more information, refer to "Sound" on page 23.

MISSED EVENTS

To view the missed events, on the home screen, select **Right navigation key**.

Missed events are the missed calls or any events which were saved earlier on the device are listed as missed events.

The missed events can be;



- **Missed calls:** When you miss a call to receive, you get a event notification.
- **Calendar events:** When you have saved an event like birthday, travel etc, and you missed that event on that particular day, a message is displayed in missed events.
- **New messages:** The unread messages are displayed in missed events.
- **Alarm:** A missed alarm is displayed in missed events.
- **New Voicemail:** A new voice mail is displayed in missed events.

MANAGING WIRELESS & NETWORK SETTINGS

WI-FI

Wi-Fi is a wireless network technology that can provide internet access at distance up to 100 feet, depending on the Wi-Fi router and surroundings.

You can access internet when you connect your XP5s to a Wi-Fi network. To connect your phone to a Wi-Fi network;

1. From **Home** screen, select **Menu** () > **Settings** ().
2. Set the **Wi-Fi** to **ON** position located under **Wireless & networks** settings.
3. Select **Wi-Fi**.
A list of Wi-Fi access points present within your phone's accessible range are displayed.
4. Select your preferred network. Enter the WEP/WPS/WPA key (if it is a secured network) and select **Connect**. To verify the password before connecting, enable **Show password**.



It is always recommended to make your Wi-Fi network connection secure and also to connect your phone to a secure network.

ADD NETWORK

1. In **Wi-Fi** settings screen, select **Options key > Add network**.
2. Enter the following details:
 - Network SSID: The wireless network ID.
 - Security: Set the security type to None, WEP, WPA/WPA2 PSK, 802.1x EAP.
3. Enable **Advanced options** to set the Proxy details and IP settings.
4. Select **Save** to save the network settings.

CONNECT TO A NETWORK

1. Press and hold the connected network.
2. Select **Connect to network**.
3. Enter the password and get connected to the network.

EDIT A NETWORK

1. Press and hold the connected network.
2. Select **Modify network**. You cannot change the network password. The other network setting details such as **Advanced options**, **Proxy**, **IP settings** can be updated.
3. Select **Save** to save the changes.

FORGET A NETWORK

1. Press and hold the connected network.
2. Select **Forget network**.
The selected network gets disconnected and displayed in the Wi-Fi list.

If you have to get connected to the same network, enter password.


ADVANCED WI-FI

On the Wi-Fi screen, select **Option key > Advanced**. The following options are displayed:




- **Install certificates:** You can browse a certificate for installation.
- **Passpoint on:** You can enable the option.
- **Wi-Fi Direct:** Select **Option key > Searching** to search for the peer devices and also select **Rename device** to rename the device.
- **WPS Push Button:** Press the **WPS Push Button** in your router, when prompted.
- **WPS Pin Entry:** Enter the given PIN number on your Wi-Fi router.

WI-FI CALLING

Wi-Fi calling is a service for phones providing the ability to make and receive phone calls over a Wi-Fi connection. It is simple to use with no separate application or log-in required.

- Initially when the phone is switched **ON**, Wi-Fi calling has to be updated with the emergency address and other information, and the same has to be saved.
- To enable Wi-Fi calling, initially Wi-Fi should be enabled or else a message pops-up to enable Wi-Fi.
- If Wi-Fi setup is not completed, a message is displayed as **Wi-Fi Calling Activation; Setup was not completed** under **My Notifications** with the icon ().

- If Wi-Fi set up is completed, Wi-Fi Calling is activated and VoWiFi () icon is displayed on the notification bar.

1. From **Home** screen, select **Menu** () > **Settings** ().
2. Select **Wi-Fi calling** ().
3. Toggle the **Wi-Fi calling** button.
When Wi-Fi calling is **ON**, your phone can route calls through W-Fi network or your carrier network, depending on the signal strength and your preferences.

BLUETOOTH



Bluetooth is a short-range wireless communication technology used to communicate between the devices over a distance of about 8 meters.

You can perform the following tasks using Bluetooth paired devices.

- Transfer media files and contacts between connected mobile devices using Bluetooth.
- Use Bluetooth connected headphones for playing media file.

PAIRING A BLUETOOTH DEVICE

To activate Bluetooth and pair your XP5s phone with other Bluetooth devices:

1. From **Home** screen, select **Menu** () > **Settings** ().
2. Enable **Bluetooth** (), located under **Wireless & Networks** settings.
A list of accessible Bluetooth devices are displayed. Ensure that Bluetooth is activated on the other device too.
3. Select your preferred device.
4. To pair with the selected Bluetooth device, select **Pair** in your device. Compare the pairing codes between your device and the other device.
The device is displayed in the Paired devices list.

EDITING PAIRED BLUETOOTH DEVICE SETTINGS




1. Select **Option key** on preferred paired Bluetooth device.
2. Select **Rename this device** to rename the paired Bluetooth device.
3. To unpair the device, select the paired device. Select **Forget** to unpair the device and **Connect** to reconnect with the device.
4. Enable **Media Audio** to connect the Bluetooth

device for listening to media files.

DATA USAGE

Data usage refers to the amount of data utilized by your phone during data transfers through the Internet. The data usage charges are dependent of the wireless plan provided by your service provider.

To monitor your data usage, adjust your data usage settings.



1. From Home screen, select **Menu** () > **Settings** ().
2. Select **Wireless & networks > Data usage** ().
3. Turn on **Cellular Data** to access Internet using your cellular network
4. **Usage:** You can see the details about the data usage for a particular time frame.
 - **Data saver:** Enable **Data saver** to use apps are allowed to use unrestricted data.
5. Select **Cellular**.
 - **Cellular data:** Enable **Cellular data** to use Internet.
 - **Cellular data usage:** Displays the data usage for a particular time frame.
 - **Billing cycle:** Billing of the used data is displayed here.
 - You can enable the **Set data warning** to get the warning message when your data usage is crossed the present limits.
 - **Data warning** shows the data available for a particular time frame.
 - Enable **Set data limit** to set the data usage limit.
6. Select **Wi-Fi > Wi-Fi data usage**. When Wi-Fi is enabled, it shows the data used for a particular time frame.
 - **Network restrictions:** The background data is restricted for these networks. While downloading apps, you receive a warning message for these restricted networks.

MORE

ACTIVATING AIRPLANE MODE

When your phone is set in airplane mode, network connectivity or mobile data connectivity is disabled. But you can access your camera, media files and other features that do not require mobile connectivity.



To activate airplane mode:

1. From Home screen, select **Menu** () > **Settings** ().
2. Select **More** located under **Wireless & networks**

settings.

3. Enable **Airplane** mode.



VPN

1. From Home screen, select **Menu** () > **Settings** ().
2. Select **Wireless & Networks > More > VPN**.
3. Select **Options key > Add VPN profile**.
4. In **Edit VPN profile** screen, enter the **Name**, **Type** (select from the drop-down list), and the **server address**.
5. Enter **Username** and **password**.
6. Select **Save**.



CELLULAR NETWORKS

You can view and set your mobile service provider settings.

Following are the options:




1. From Home screen, select **Menu** () > **Settings** () > **More**.
2. Select **Cellular networks**.
3. Enable **Enhanced 4G LTE Mode** to improve the voice and other communication quality.
4. Enable **Data roaming** to have network connectivity when you are in a roaming network.
5. Select **Access Point names** to view and edit the network access points.
6. Choose the **Network operators** from the available list.

NETWORK SETTINGS RESET




1. From Home screen, select **Menu** () > **Settings** ().
2. Select **Wireless & Networks > More > Network settings reset**.
3. Select **RESET SETTINGS**.
 - It reset all the network settings including Wi-Fi, Cellular data, and Bluetooth.

MANAGING DEVICE SETTINGS

DISPLAY

- From **Home** screen, select **Menu** () > **Settings** () > **Device** > **Display** ().
- Set one of the following options to configure your phone's display:
 - Brightness Level:** Set the brightness of the phone display. This also optimizes the battery power consumed.
 - Wallpaper:** Set the wallpaper for your home screen. You can select from one of the following wallpaper collections:
 - Gallery:** includes photos and screenshots taken using the phone's camera.
 - Wallpapers:** includes images that are pre-loaded with the phone.
 - Sleep:** Set the sleep time so that the screen brightness is turned down after specified time of phone inactivity. This setting also optimizes the battery power.
 - Font size:** Set the font size of the text displayed in the screen.

SOUND

- From **Home** screen, select **Menu** () > **Settings** () > **Device** > **Sound** () > **Profile** > **Profiles**.
- The **Sound** settings are displayed based on the profile selected. For each profile selection, the settings are displayed as below.




OPTION	DESCRIPTION
1. Standard	Set to Standard and select Option key > Edit . The following options are displayed:
Sound	<ul style="list-style-type: none">You can set Media volume, Ring volume, Alarm volume, Phone ringtone, Default notification ringtone.You can enable the Vibrate when ringing.
Other Sounds	You can set Screen lock sounds, Charging sounds, and key press tones .

OPTION	DESCRIPTION
Notification	<ul style="list-style-type: none">If Pulse LED light is enabled, battery status indication is not affected.If Flash notification alert is enabled, when battery is above 20% level, you can use camera flash light for missed events.If Flash call alert is enabled, you can use Flash camera light for incoming voice call.
2. Outdoor	Set to Outdoor and select Option key > Edit . The following options are displayed:
Sound	<ul style="list-style-type: none">You can set Media volume, Ring volume, Alarm volume, Phone ringtone, Default notification ringtone.You can enable the Vibrate when ringing.
Other Sounds	You can set Screen lock sounds, Charging sounds, and key press tones .
Notification	<ul style="list-style-type: none">If Pulse LED light is enabled, battery status indication is not affected.If Flash notification alert is enabled, when battery is above 20% level, you can use camera flash light for missed events.If Flash call alert is enabled, you can use Flash camera light for incoming voice call.
3. Silence	Set to Silence and select Option key > Edit . The following options are displayed:

OPTION	DESCRIPTION
Sound	When set to Silence mode, this profile blocks all sounds and vibrations including alarms, videos, music and games. You will be able to make phone calls.
Notification	<ul style="list-style-type: none"> • If Pulse LED light is enabled, battery status indication is not affected. • If Flash notification alert is enabled, when battery is above 20% level, you can use camera flash light for missed events. • If Flash call alert is enabled, you can use Flash camera light for incoming voice call.
4. Meeting	Set to Meeting and select Option key > Edit . The following options are displayed:
Sound	<ul style="list-style-type: none"> • You can set only Media volume and Alarm volume can be changed. Other volume options are disabled.
Other Sounds	Options are disabled.
Notification	Options are disabled.

QUICK PROFILE SWITCH

PROFILE SWITCH:




1. From **Home** screen, select **Menu** () > **Settings** () > **Device** > **Profile** ().
2. Select **Profile Switch**.

You can use this option to quickly switch profiles through homescreen shortcut.



You can select any 3 profiles at a time.

To create a new profile,

1. From **Home** screen, select **Menu** () > **Settings** () > **Device** > **Sound** ().
2. Select **Profiles** > **Option key > Create new**.
3. Enter the required **profile name**.
Maximum length of 24 characters is allowed for the profile name and the name should be unique.
4. Before modifying the necessary sound and notification settings, save the new profile.

SOUND

- **Media Volume:** You can increase, decrease, and mute media volume.
- **Alarm volume:** You can increase, decrease or mute the alarm volume.
- **Ring volume:** You can change the ringer volume to no ringer or ringing.
- **Also vibrate for calls:** Enable this option to set the device on vibration for calls.
- **Phone ringtone:** You can select the required ringtone from the list.
- **Default notification ringtone:** Set the default notification ringtone from the list.

OTHER SOUNDS

- **Screen lock sounds:** Enable or disable this option.
- **Charging sounds:** Enable or disable this option.
- **Key press tones:** Enable or disable this option.

NOTIFICATION

- **Pulse LED light:** If Pulse LED light is enabled, Pulse LED light is used to display notification alert and the battery status indication is not affected.
- **Flash notification alert:** If Flash notification alert is enabled, when battery is above 20% level, you can use camera flash light for missed events.
- **Flash call alert:** If Flash call alert is enabled, you can use Flash camera light for incoming voice call.

VOICE NOISE CANCELLATION




By default, **FENS** is enabled and reduces the noise cancellation.

STEALTH PROFILE




1. The **STEALTH** profile can be enabled by pressing the **Speaker** button for three seconds.
- Once the **Stealth** profile is enabled, the profile is set to **STEALTH** mode and the screen turns to DIM. The text is displayed on the home screen or the lock screen.

- Once the **Stealth** profile is disabled, the previous profile is activated and the profile name is displayed on the home screen. The screen brightness will be as per the activated profile.
- 2. Stealth profile can be disabled by pressing the speaker button for 3 seconds.
This option works only when the accessories like **Bluetooth** and **wired Headset** are connected.




APPS

1. From **Home** screen, select **Menu** () > **Settings** () > **Device** > **Apps** ().
2. Select All apps drop-down list. you can select any of the following options:
 - All apps
 - Enabled
 - Disabled
3. Select the required app from the list. Open the app and select **FORCE STOP**.
4. Select the app and press **Options key**. The following options are displayed:
 - Advanced
 - Show system
 - Reset app preference




USB POWER SAVING

1. From **Home** screen, select **Menu** () > **Settings** () > **Device** > **USB Power Saving** ().
2. **Automatic Power ON:** If enabled, the device gets automatically power ON when the USB is connected.
3. **Automatic Power OFF:**
 - **Automatic Power OFF:** If enabled, the device will be automatically powered OFF when the USB is connected.
 - **Power off device at:** If you enable Automatic power off, this option will be active. You can set the time for the device to be powered off.
 - **Automatic power OFF:** If this is enabled, upon USB disconnections, the device will be powered off after the set hours.
 - **On USB disconnect, power OFF:** You can set the hours for the device will be powered off once the USB is disconnected.

STORAGE

1. From **Home** screen, select **Menu** () > **Settings** () > **Device** > **Storage** ().
2. On **Internal shared storage**, the following options are displayed with memory used for each app:
 - Shows the used memory
 - Apps
 - Images
 - Videos
 - Audio
 - System
 - Other
 - Cached data
 - Explore

BATTERY




1. From **Home** screen, select **Menu** () > **Settings** () > **Device** > **Battery** ().
2. Set the **Battery saver ON** by selecting the option given for Turn on automatically:
 - Never
 - at 5% battery
 - at 15% battery






Battery saver turns off automatically when your device is charging.

You can also view the battery usage data.

MEMORY

1. From **Home** screen, select **Menu** () > **Settings** () > **Device** > **Memory** ().
2. Go to **App usage** and select the time from the drop-down list. You can view the applications usage based on the set time frame.
3. Select **Memory used by apps** to check the memory used for each application for the set time frame.




GESTURE

1. From **Home** screen, select **Menu** () > **Settings** () > **Device** > **Gesture** ().
2. Enable **Toggle Torch**.
3. To quickly toggle torch, shake the device twice.

MANAGING PERSONAL SETTINGS




HOME SCREEN SHORTCUTS

You can set the shortcuts on the home screen.

1. From **Home** screen, select **Menu** () > **Settings** () > **Personal**.
2. Select **Home screen shortcuts** ().
3. Go to the **Navigation up key** and select the app to be set for the up key navigation.
4. Go to the **Navigation center key** and select the app to be set for the center key navigation.
5. Go to the **Navigation down key** and select the app to be set for the down key navigation.




EMERGENCY INFO

You can enter the emergency information to be viewed during an emergency.

1. From **Home** screen, select **Menu** () > **Settings** () > **Personal**.
2. Select **Emergency Info** ().
3. Go to **My information** and enter the following details:
 - First name
 - Last name
 - Phone number
 - Email address
 - Address
 - Blood type
 - Allergies
 - Medication
 - Organ donor
4. If you do not want to enter any of the above details, select **Skip**.
5. Go to **Add** and you can select the contact from the phone book by selecting **Select contact**.
OR
6. Select **Add > Add new**. Add **First name**, **Last name**, and **Phone number**. Select **Add**.
This contact is added under Emergency contacts list.




LOCATION

You can enable and configure the Location settings.

1. From **Home** screen, select **Menu** () > **Settings** () > **Personal**.
2. Select **Location** (). Enable and modify required security settings.
3. Enable **Location**.
4. Set the **Location Mode** to one of the following options:
 - **High accuracy:** uses AGPS, Wi-Fi, mobile networks, and other sensors to get the highest-accuracy location for your device. It uses location services to help estimate your location faster and more accurately.
 - **Battery saving:** allows your device to estimate your location using low battery-intensive location sources, such as Wi-Fi and mobile networks. It uses location services to help estimate your location faster and more accurately.
 - **Device only:** allows your device to estimate your location using GPS only. It uses the satellite information to provide location information. This mode may use more battery power and take longer to determine your location.
5. You can also view the apps which have requested location recently under **Recent location requests**.

SECURITY




You can activate and protect your phone from unauthorized access by configuring the security settings.

1. From **Home** screen, select **Menu** () > **Settings** () > **Personal**.
2. Select **Security** ().
3. Select **Device security > Screen lock** and select one of the following options to configure the phone:
 - None
 - Press and hold * key
 - **PIN:** When enabled, enter you own PIN value. When the phone is locked, unlock it using the PIN. When the phone is locked, you can answer an incoming call without unlocking the phone.
4. **Encryption:** By default, the phone is already encrypted.
5. **SIM card lock:** Select **Set up SIM card lock** to view the SIM settings.
 - **Lock SIM card:** You can set a PIN use the phone.
 - **Change SIM PIN:** You can change the SIM PIN.

6. Enable **Passwords > Make password visible** to the password characters.
7. **Device administration:**
 - **Device administrators:** You can view or deactivate the device administrator.
 - **Unknown resources:** When enabled, it allows installing the apps from unknown sources.
8. **Credential storage:**
 - **Storage type:** Displays the storage type.
 - **Trusted credentials:** You can view and verify the system and user certificates.
 - **Install from SD card:** You can view and install new user certificates from SD card.
 - **Clear credentials:** You can remove all certificates.
9. **Advanced:**
 - **Trust agents:** To use this option, a screen lock should be set.
 - **Apps with usage access:** Select the app and select center key to enable the **Permit usage access**.

LANGUAGE & INPUT

You can set the phone's language to any of the languages displayed in the language list.




1. From **Home** screen, select **Menu** () > **Settings** () > **Personal**.
2. Select **Language & input** ().
3. Go to **Languages** and select any language from the list as your preferred language.
The following languages can be set as a preferred language:
 - English
 - Espanol
 All the menu items and user feedback messages will be displayed in the set language.
4. Select **Keyboard & input methods > FlexT9 Text Input**.
 - **Input language:** You can set the input language to either **English** or **Espanol**.
 - **Personal Dictionary:** The default keyboard input language is set to English (US)/Spanish (US) - T9 format. This cannot be modified.
 - **Preferences:**
 - **Auto-capitalization:** The first letter of the new sentence is automatically capitalized.
 - **Auto-punctuation:** If this option is enabled, when you press the space key twice at the end of a word, a period will be inserted.
 - **Language switch key:** Press and hold the * key to switch the language.
 - **New Word Prediction:** Predeicts a new word

based on the previous word entered.

- **Suggest contact names:** Displays suggested contact while typing.
5. Select **Supprt > FlexT9 Help**.It displays FlexT9 help guide.
Select **Support > About**. It displays the FlexT9 version details.
 6. Select **Speech > Text-to-speech output**. You can set and reset the **Speech Rate** and **Speech Pitch**.

FACTORY RESET




You can erase all the data from your phone's internal storage.

1. From **Home** screen, select **Menu** () > **Settings** () > **Personal**.
2. Select **Fatory Reset** ().
3. You can erase all data from your phone's internal storage which includes;
 - System and app data and settings
 - Downloaded apps
 - Music
 - Photos
 - Other user data (includes all applications and contacts stored in phone memory)

MANAGING SYSTEM SETTINGS




DATE & TIME

You can set and display the date and time on the phone. You can also select the display format.

1. From **Home** screen, select **Menu** () > **Settings** () > **System**.
2. Select **Date & time** ().
3. Select the following options to configure phone:
 - To synchronize the date and time with the network provided time, enable **Automatic date & time**.
 - To synchronize the time zone with the network provided time enable, **Automatic time zone**.
 - To set the date manually, select **Set date**. Scroll and select the date, month and year. Select **Done**.
 - To set the time manually, select **Set time**. Scroll and select the hour and minute. Select **Done**.
 - To set the time zone, select **Select time zone**. Scroll and select your time zone.
 - To set the clock to 24-hour format enable **Use 24-hour format**. By default, the phone is set to **12-hour format**.




ACCESSIBILITY

You can make websites and applications more accessible to people with disabilities when they are using mobile phones and other devices.

1. From **Home** screen, select **Menu** () > **Settings** () > **System**.
2. Select **Accessibility** ().
3. Select **Services**.
 - **SCOUT by AetherPal**: This is a mobile support management service which helps securely connect to remote devices.
 - **Talkback**: When Talkback is enabled, it helps vision-impaired users interact with their devices. It uses spoken word, vibration and other audible feedback to let you know what is on your screen.
4. Select **System**.
 - **Captions**: When Captions is **ON**, you can set the following options under **Standard options**:
 - Language
 - Text size
 - Caption style
 - **Font size**: You can set the font size from smaller to bigger and see the preview of the same.
 - **Mono Audio**: Enable **Mono audio** to combine the channels when playing audio.

- **Vibrate on keypress**: You can enable/disable this option to make the device on vibrate when a key is pressed.
- **Sound balance**: You can adjust the left and right volume balance.
- **Text-to-speech output**:
 - **Preferred engine**: The preferred engine is set.
 - **General**: You can adjust the **Speech rate** and **Pitch**. Reset the speech rate and speech pitch. You can demonstrate a speech synthesis. English is set as default language status.

ABOUT PHONE

1. From **Home** screen, select **Menu** () > **Settings** () > **System**.
2. Select **About phone** ().
3. Go to **Software Update** and **Check for Updates**. If there is any updates, it starts updating.
4. The following information is displayed:
 - Status
 - Legal Information
 - Model
 - Firmware version
 - Firmware security patch level
 - Baseband version
 - Kernel version
 - Build number

MANAGING CONTACTS

You can use the phonebook to maintain phone numbers of your contacts. This feature enables you to add, dial phone numbers and send SMS and MMS messages

To access the contacts, from **Home** screen, select **Contacts** (👤). The contacts saved in the phonebook are displayed.

ADDING A NEW CONTACT FIRST TIME

After inserting the SIM, when you switch **ON** the device for the first time and there are no contacts added in the device or SIM.

You have only two options here:

- **Add Contact:** Add **New contact** screen is displayed. Enter all the details and select **Options key > Save** to save the contact.
- **Import Contacts:** Select **Import Contact** to import from .vcf file.

ADDING A NEW CONTACT

1. To add a new contact, select **Menu** (⌘) > **Contacts** > **Add contact**. Enter the contact details and select **Option key > Save** to save the contact.
2. You can also enter a number using dialpad and select **Add to contact** (👤) and then **Create new contact** (👤) to add a new contact. Select **Option key > Save** to save the contact.

VIEWING CONTACT DETAILS

1. From **Home** screen, select **Menu** (⌘) > **Contacts** (👤).
2. Scroll to the required contact and select the contact to view the contact details.

SENDING A MESSAGE FROM CONTACTS

You can send SMS and MMS messages to your contacts.

1. From **Home** screen, select **Menu** (⌘) > **Contacts** (👤).
2. Scroll to the required contact and open it.
3. Select **Option key > Send message**.
4. Enter the message and select **Option key > Attach photos/videos** to attach the photos and videos.
5. Select **Option key > Send**.



If you attach a media file or a contact to your SMS message it is converted to an MMS message automatically.

DIALING A NUMBER FROM CONTACTS

1. From **Home** screen, select **Menu** (⌘) > **Contacts** (👤).
2. Scroll to the required contact and select the contact to view the details.
3. Select the number and press **Center** key to initiate the call.
OR
4. Select the required contact from the list and press the green button on the phone to initiate the call.

EDITING THE CONTACT DETAILS

1. From **Home** screen, select **Contacts** (👤).
2. Scroll to the required contact and select the contact to view the details.
3. Select **Option key > Edit**.
4. Edit the required details. Select **Option key > Save** to save the details.

On the **Contacts** screen, select **Options key** to view the menu options. Following are the menu options:

ME:



1. Select **Me** and a screen is displayed to add device owner's name, Phone number and the address.
 - Select **Options key** and you have the following options:
 - **Send message:** You can select either email or the phone number to send a message.
 - **Edit:** You can edit the contact details.
 - **Share:** You can share you contact details via **Messaging, Bluetooth and PSX Messenger**. The contact is shared as .vcf file.
 - **Copy to SIM:** You can copy the contact from the device to SIM.
 - **Send Contact:** The contact is sent as a text message to the selected contact.

ADD CONTACT



You can add a new contact by entering all the details. Select **Options key > Save** to save the contact.

IMPORT/EXPORT



IMPORT FROM .VCF FILE

1. From **Home** screen, select **Menu** () > **Contacts** ().
2. Select **Option key** > **Import/export**.
3. Select **Import from .vcf file**.
4. Press **Center** key to select the contact to be imported.
5. Select **Option key** > **Done**.
The contact is imported to the list.



IMPORT FROM SIM CARD

1. From **Home** screen, select **Menu** () > **Contacts** ().
2. Select **Option key** > **Import/export**.
3. Select **Import from SIM card**.
The list of contacts stored in your SIM card are displayed.
4. Select the contact to be moved to the phone.
5. Select **Option key** > **Done**.
6. A confirmation message is displayed. Select **OK** to confirm.
The contact is imported to the phone address.

EXPORT TO SIM CARD



1. From **Home** screen, select **Menu** () > **Contacts** ().
2. Select **Option key** > **Import/export**.
3. Select **Export to SIM card**.
4. Select the contact to be exported from Phone to SIM card.
5. Select **Option key** > **Done**.
The contact is exported to the SIM card.

EXPORT TO .VCF FILE

1. From **Home** screen, select **Menu** () > **Contacts** ().
2. Select **Option key** > **Import/export**.
3. Select **Export to .vcf file**.
4. Press **Center** key to select the contact to be exported.
5. Select **Option key** > **Done**.
A message is displayed to select the source to save the .vcf file.

SHARE ALL CONTACTS

You can send contact information in following 3 ways:

1. From **Home** screen, select **Menu** () > **Contacts** ().
2. Scroll to the required contact and select the contact and press **center** key to open the contact details.
3. Select **Option key** > **Share all contacts**. You can use one of the following options to share the required contact:
 - **Messaging:** Send the contact details as a multimedia message to any mobile phone.
 - **Bluetooth:** Send the contact details to a Bluetooth device paired with your phone. Select the Bluetooth device to share the contact.
 - **PSX Messenger:** Before sharing the contact via PSX messenger from the native phonebook, scan the QR code and share the contacts with PSX PTT.

BLOCKED NUMBERS



You cannot receive either a call or a text message from a blocked number.

SELECT

You can select the required contacts by checking the boxes next to the contact.



SETTINGS

You can set the sort list to view the contacts and also the first or last name of the contact to be displayed first.




1. From **Home** screen, select **Menu** () > **Contacts** ().
2. Select **Options key** > **Settings**. Set the following options:
 - **Sort by:** Sort the contact names by first name or last name.
 - **Name format:** Set the contact display name to first name or last name.

MANAGING CONTACT SETTINGS

You can edit and modify ringtone and call receiving settings for individual contacts.

1. From **Home** screen, select **Menu** () > **Contacts** ().
2. Scroll to the required contact and select the contact to view the contact details.
3. Select **Options key** and select one of the following:
 - **Set Ringtone** to set a specific ringtone for that contact.
 - Check the option **All calls to voicemail** to forward all incoming calls from that contact to your voice-mail box.

DELETING A CONTACT

1. From **Home** screen, select **Menu** () > **Contacts** ().
2. Scroll to the required contact and select the contact to view the contact details.
3. Select **Options key** > **Delete** or press **Clear** () key. The contact is deleted after the confirmation.

MANAGING CALL SETTINGS

MAKING A CALL

1. From **Home** screen, select **Phone** (📞).
The phone screen with last dialed number, missed calls and received calls are displayed.

DIALING A NUMBER VIA CONTACT

1. From **Home** screen, select **Menu** (☰) > **Contacts** (👤).
2. Scroll to the contact and select the contact. The contact details are displayed.
3. Select the required phone number to call the contact.

ADDING A CONTACT FROM HOME SCREEN

1. From **Home** screen, enter the required number to be dialed.
2. Select **Add to contact** (👤).
3. Select **Create new contact** (👤).
4. In the **Add new contact** screen, add the name and other details for the contact.
5. Select **Option key > Save**.
The contact is saved.

VIEWING CALL HISTORY

1. From **Home** screen, select **Phone** (📞).
2. The **Recent calls** screen displayed with recently called, received, and missed calls.

DELETING CALL HISTORY

1. From **Home** screen, select **Phone** (📞).
2. On the **Recent calls** screen, select **Option key > Delete selected call log**.
3. A confirmation message is displayed to delete the selected call log. Select **Delete** to delete the call log.

The selected call log is deleted.

SPEED DIAL SETTINGS

With the Speed dial option, the user can assign a contact to each key present in the keypad (1 to 9). User needs to press the keypad to initiate the call to the assigned contact.

To set the speed dial,

1. From **Home** screen, select **Phone** (📞).
2. On **Recent calls** screen, select **Option key > Speed dial settings**.
3. Assign a contact for each key present in the keypad (1 to 9).
4. Press a particular keypad to initiate a call to the assigned contact.

CALL SETTINGS

You can change the incoming call ringtone, enable vibrate when ringing and enable audible press tone.

To view and modify call settings,

1. From **Home** screen, select **Phone** (📞).
2. On **Recent calls** screen, select **Option key > Call settings**. Different settings are:

QUICK RESPONSES

When you are not able to answer an incoming call, you can send a quick response to the caller. To view and edit quick responses, select **Call settings > Quick responses**. Select the specific response message to edit. Edit the message and select **OK**.

CALLS

Select the SIM card to view the settings.

Setting:

1. **Calling accounts:**
 - **SIP SETTINGS: SIP Accounts:**
To add a SIP account and configure your incoming and outgoing preferences:
1. Select **Calls > Calling account > SIP settings and SIP accounts**.
2. Enable **Receive incoming calls** to answer incoming Internet calls.
This might reduce your phone's battery life.
3. Select **Option key > Add account** to configure a new SIP account.
4. Enter the following details and select **Option key**

- > **Save** to save the account:
- **Username:** Username to login to SIP account.
 - **Password:** Password to login to SIP account.
 - **Server:** SIP server details.
 - **Optional Settings:** Select to view/modify or hide optional details such as authentication username, display name, outbound proxy address, port number, transport type and Send keep alive options.
- **USE SIP CALLING**
1. Select **Calling accounts > Use SIP calling**.
 2. A dialog is open with the following options:
 - **For all calls:** If this option is selected and when the phone is connected to Wi-Fi network or mobile Internet, each dialed call becomes an Internet call.
 - **Only for SIP calls:** If this option is selected, only SIP call can be dialed.
- **RECEIVE INCOMING CALLS**

Enable Receive incoming calls to answer incoming Internet calls.

This might reduce your phone’s battery life.

3. **Voicemail:**
- **Service:** Displays the **Service** name. It is displayed as **My Carrier**.
 - **Setup:** You can set a number for voicemail.
 - **Sound:** Set the sound from the list.
 - **Vibrate:** Check the box to set it to vibrate.
4. **Fixed Dialing Numbers:**
- **Enable FDN:** Fixed Dialing numbers are enabled.
 - **Change PIN2:** Change the PIN for FDN access.
 - **FDN List:** Manage phone number list.
5. **Wi-Fi calling:** You can toggle the Wi-Fi calling button to route calls through Wi-Fi network.
6. **Call forwarding:**
- You can forward your incoming calls to a number in the contacts or a new number, provided your network operator supports this service.

Select one of the following call forward options:

SETTINGS	DESCRIPTION
Always forward	Forward all incoming calls to a pre-designated number.
When busy	Forward calls when your phone is busy.
When unanswered	Forward calls when you do not answer incoming calls.
When unreachable	Forward calls when your phone is switched off or is out of coverage area.

7. **Additional settings:**
- **Caller ID:** When SIM card is inserted, this option is enabled. This feature is used to display caller details (MSISDN or contact name) to the user. If there is no network connection, the number is displayed a private number.
 - **Call waiting:** When call waiting is enabled and the phone is in conversation, the incoming number is displayed when you receive a call. To activate call waiting in the Call settings screen, enable **Call waiting**.
8. **Call barring:**

SETTINGS	DESCRIPTION
Outgoing call barring	Outgoing calls are barred: Outgoing call, International call, International roaming call
Incoming call barring	Incoming calls are barred: All, Roaming
Cancel all callbarring	Input the password to cancel the call barring.
Change password	Change the password.

CALL BLOCKING

You will not receive calls or messages from blocked numbers.


CHANGING RINGTONES AND MASTER VOLUMES


1. From **Home** screen, select **Menu (⌘) > Settings (⚙️) > Sounds > Profiles (📄)**.
The profile types are:
 - Standard
 - Outdoor
 - Silence
 - Meeting
2. Select any of the profiles. Select **Option key > Edit**.
3. Select **Option key > Save** to change the settings.

SENDING MESSAGES

SMS and MMS are convenient and inexpensive means of communication. You can send a text message to other people via SMS service. MMS allows you to send messages by including multimedia content such as pictures, audio files, video files, and so on.


You can use the Messaging in your phone to send an SMS and MMS message to other mobile phones or any other equipment that can receive SMS and MMS.

 The MMS feature is available only if you subscribe it from your network operator.

To access the message function, from **Home** screen, select **Messaging** ().

SENDING SMS/MMS MESSAGE

You can send SMS and MMS messages to contacts in your phonebook and to new numbers that are not present in the phonebook.

1. To create a SMS message, from **Home** screen, select **Messaging** ().
2. Select **Option key > New message**.
3. Enter the contact name or the phone number in the **To** field.

If you enter an alphabet, all the contact names starting with that alphabet and containing that alphabet are displayed as a list. Scroll down to select the contact.

4. Enter the message.

When you add an attachment, the message is automatically converted to a multimedia message. MMS charges will apply, based on the operator. You can add any multimedia attachment up to the size of <= 5 MB.

On a new message screen, select **Options** key and the following options are displayed:

- **Add Contact:** You can select the contact from the phonebook.
- **Attach photos/videos:** Select a photo or video from the Gallery.
- **Attach other:** You can select any of the following attachments to send a message.

ATTACHMENT TYPE	DESCRIPTION
Capture picture	Take a new photo using the mobile camera and attach.
Capture video	Take a new video using the camcorder and attach.
Audio	Attach an audio file from the phone memory.
Record audio	Record a new audio using the sound recorder and attach.
vCard	Attach a contact available in the phone.
vCalendar	Attach a calendar event.
Slideshow	Create new slideshow or edit the existing slides and attach.

- **Insert from templates:** You can insert an attachment the from the template.
- **Insert contact:** You can insert a contact from the phonebook.
- **Discard:** Select **Discard** to delete the message. The message thread is deleted after confirmation.


SEARCH

To search a particular message, on a new message window, select **Options key > Search**. Enter the key word to search a particular message.

EMERGENCY ALERTS

You will receive active alerts and emergency alerts from the service provider.

MESSAGE SETTINGS

- 1. From **Home** screen, select **Messaging** ().
- 2. Select **Option key > Setting**. The following settings are displayed:



SETTINGS		DESCRIPTION
NOTIFICATION		
Vibrate		Enable vibrate alert for incoming messages.
DISPLAY		
Group notification message		Enable this notification message to auto combine the notification into one group.
STORAGE		
Delete old messages		Delete old messages automatically when the storage limit is reached.
Text message limit		Set the maximum number of SMS messages to be stored. By default, 1000 messages can be stored.
Multimedia message limit		Set the maximum number of MMS messages to be stored. By default, 1000 messages can be stored.
Memory status		Shows the memory used for SMS, MMS and the total memory used.
ADVANCED SETTINGS		
Text (SMS) messages settings		
Delivery reports		Request a delivery report for each message you send.
Message template		Edit the quick message template.
Manage SIM card messages		Manages the messages in the SIM card located under Text Messages .
SMS Validity Period		Set the validity period: Not set, 1 hour, 6 hours, 12 hours, 1 day, and Maximum
Enable WAP PUSH Service		Enable to receive service message.
Multimedia (MMS) messages settings		
Group messaging		Enable and use MMS to send a single message when there are multiple recipients.
Delivery reports		Request a delivery report for each message you send.

Read reports	Request a read report for each message you send.
Auto-retrieve	Enable to automatically retrieve messages.
Roaming auto-retrieve	Enable to automatically retrieve messages while roaming.
MMS Validity period	Set the validity period: Maximum or Two days

On **Message Settings** screen, select **Option key > Restore default settings**. The default settings are restored.

DELETING MESSAGES

To delete all the messages,

- 1. From **Home** screen, select **Messaging** ().
- 2. Select the message and press **Option key > Delete selected thread** or select a message thread and press **Clear** key ()
- 3. A confirmation message is displayed. Select **Delete** to delete the selected message.
- 4. To delete an individual conversation, select the conversion to be deleted and select **Delete** option and confirm the choice.


LINC PTT SERVICES


Your Sonim phone comes with pre-loaded Linc PTT applications.

INITIAL LINC PTT SETUP



Please refer to the Linc PTT setup instructions provided with the phone or visit the Southern Linc website www.southernlinc.com/LTE for additional instructions and videos.

LINC PTT


1. From **Home** screen or **App** screen, select **Linc PTT** icon ().

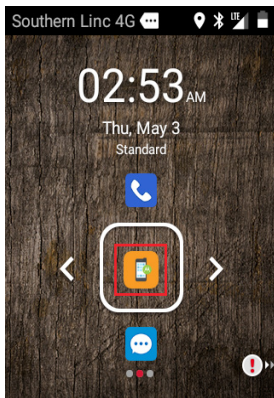

2. On initial startup, select **Allow** on the below screen to give **Linc Msg** to access photos, media, and files on your device.
 - You can also share your location. You can send quick messages if it is configured on your phone.
 - You can select the file or image from the Gallery, select music track or sound record and take pictures using the phone camera.

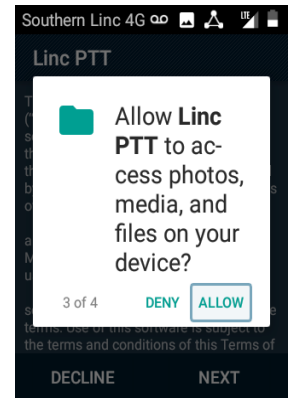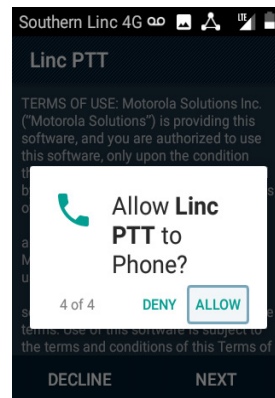


3. The **Linc PTT** home screen is displayed.

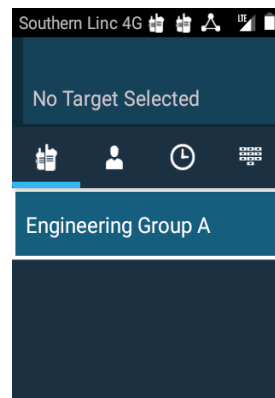

4. On **Linc PTT** screen, the following four tabs are displayed:
 - Talk Group Tab
 - Contacts Tab
 - History Tab
 - Dialpad
- The top portion of the **Linc PTT** screen is called as **Grey Bar**, where the selected group/contact or dialing number details are displayed.

TALK GROUP TAB

The **Talk Group** tab is mainly used for Enterprise solutions.

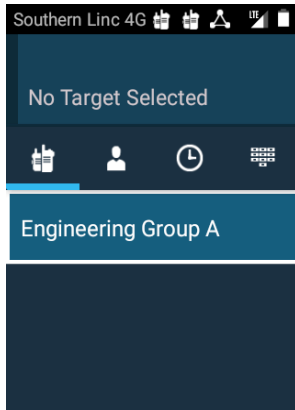


1. On **Talk Group** tab, select **Option key > Change group list**.
2. You can change the group from the displayed list. You can select the **User Defined Group Lists**.
3. Select **Create new list of groups** to create a new list of groups. You can select up to ten groups.
4. Check the box next to the **Group** and press the center key to select the group.
5. Select the **check mark** (✓) which is available on the top right corner of the screen.
6. A confirmation message screen **Save this group list** is displayed. Enter the **List name** and select **Save**.
The group list is added to the **User Defined Group List**.
7. On **Talk Group** tab, select **Option key > Settings**.
 - **PTT Services:** Turn **ON** the toggle button to enable PTT services.
 - **Display Options:**
 - **Display names:** You can view the contact names in the following ways: **First name first**, **Last name first**, and **Display names**.
 - **Account:** Displays the account details.
 - **About:**
 - **About Linc PTT:** Displays the PTT version.
 - **End User License Agreement:** Displays the TERMS OF USE and the license agreement.
 - **Open source licenses:** Displays the open source licenses about the third party software and the source software.
 - **Export logs:** Logs are exported to the Storage. You can get the logs emailed to your email ID.
 - **Tone Settings:**
 - **PTT alert tone repeat:** You can set the alert

tone for the following time frame: **Once, Twice, 3 times, 4 times, 5 times** and **Infinite**. Press **OK** to select the required time frame.

- **Emergency Settings:**
 - **Emergency target:** You can set the **Emergency contact** by selecting the required contact from the contact list. You can choose a Talkgroup from the list for **Emergency TalkGroup** to initiate emergency call which user is monitoring.
 - **Hot Mic:** Turn **ON** toggle button to enable Hot Mic.
 - **Hot Mic duration:** You can set the hot mic duration for 30 seconds when the hot mic is enabled.
 - **Hot Mic frequency:** You can set the hot mic frequency to 15 seconds.
8. On **Talk Group** tab, select **Option key > Enable Scanning/Disable Scanning**. When you enable a particular group, you can receive the call from other available groups. Once you select **Disable Scanning**, you can receive a call from the group which is monitored.

CONTACTS TAB

The contacts are displayed according to first name by default. They are displayed as digits or alphabets.

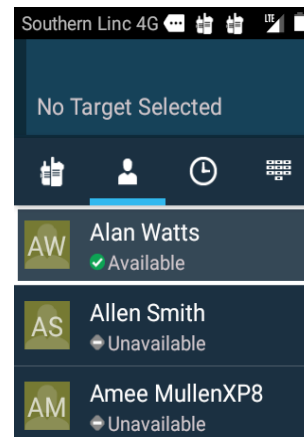


1. On **Contacts** tab, select **Option key > New Contact**.
2. Enter the following information and press the **check mark** (✓) on top right corner of the screen to save a contact:
 - First Name
 - Last Name
 - Display Name
 - Contact ID
 - Agency
 - Organization Name
 - Email Address
 - Phone Number

The mandatory fields are **First Name**, **Last Name**, **Display Name** and **Contact ID**.

3. On **Contacts** tab, select **Option key > MultiSelect Mode**.
4. You can select the contacts by selecting the check box next to each contact.
5. Select **Option key > Save** to save the group.
6. Enter the **Group Name** and select **Save**.
7. On **Talk Group** tab, select **Option key > Settings**. Settings are application based and they are common for all the four tabs. Refer to the **Settings** described for **Talk Group** tab.

HISTORY TAB

The **History** tab displays the missed, outgoing and incoming sessions.

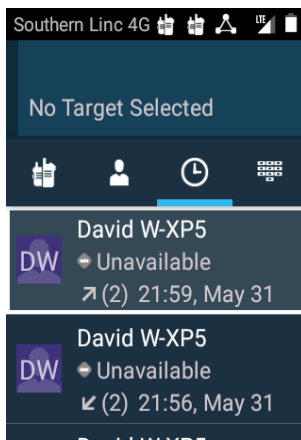

1. On **History** tab, select **Option key > Missed sessions**.

It shows the missed sessions.

Select **Options key** and the following options are displayed:

- All PTT sessions
 - Outgoing sessions
 - Incoming sessions
 - Clear history
 - Settings
2. On **History** tab, select **Option key > Outgoing Sessions**.

It shows the outgoing sessions.

Select **Options key** and the following options are displayed:

- All PTT sessions
- Missed sessions

- Incoming sessions
- Clear history
- Settings

3. On **History** tab, select **Option key > Incoming Sessions**.

It shows incoming sessions.


Select **Options key** and the following options are displayed:

- All PTT sessions
- Missed sessions
- Outgoing sessions
- Clear history
- Settings

*Settings are common for all the above options. Refer to the Settings which are described for **Talk Group** tab.


DIALPAD TAB

You can enter the number using the keypad. After dialing, press PTT key to place a call. Press phone key to send alert.

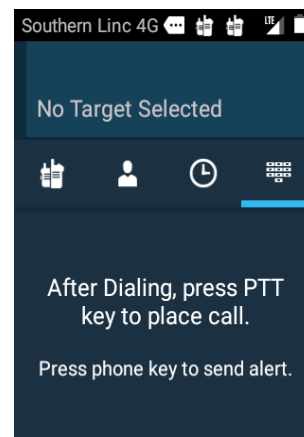

- Select **Options key > Settings**. Refer to Talk Group tab for Settings.

PTT CALL END

To end a PTT call, press **Clear** () button on the keypad. This functionality works on Contacts tab, History tab, and Dialpad tab. This functionality does not work on Talk Group (Enterprise).


CALL BACK REQUEST

You can request a call back to the contacts from Contacts tab, History tab and Dialpad.



LINC MESSAGES

You can send and receive the PTT messages using **Linc Msg** application.


1. From **App** screen, select **Linc Msg** icon ().

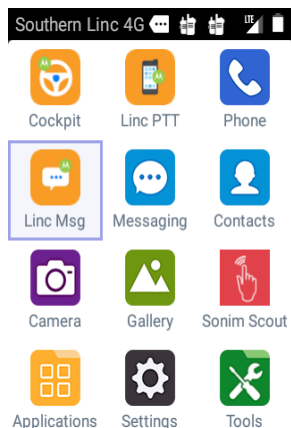

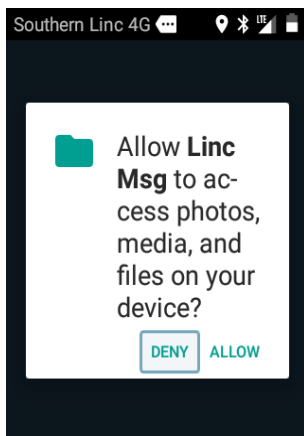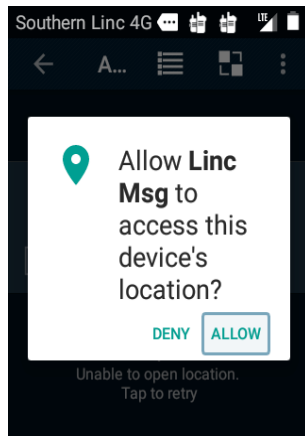



2. On initial startup, select **Allow** on the below screen to give **Linc Msg** to access photos, media, and files on your device.
 - You can also share your location. You can send quick messages if it is configured on your phone.
 - You can select the file or image from the Gallery, select music track or sound record, and take pictures using the phone camera.

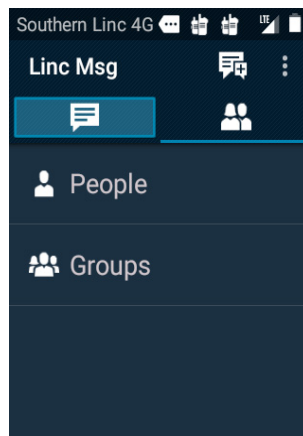


3. Select **Message** tab and the following screen is displayed. You can view the received messages.




Select the **New Message** icon () on **Linc Msg** home screen. You can select the contact from the list by selecting the check box next to each contact. Select the **Group** tab to select the Group to send a new message. The contact is added to **To** field. Type the message. Select the **Send** icon () to send the message.

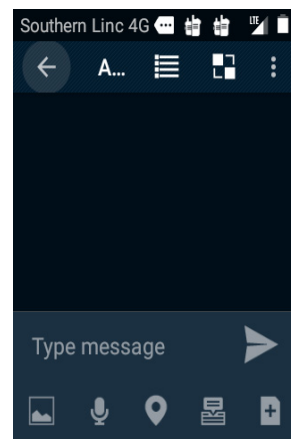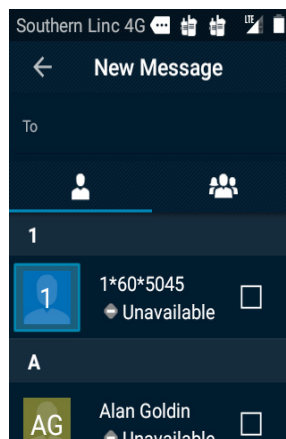


On the **Messages** tab, select **Options** () and the following options are displayed:

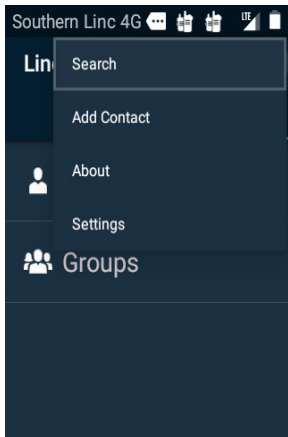


- **Search:** You can search contacts, groups, and messages.
- **Add Contact:** Enter the details shown on the screen and select the **check mark** () on **Add new contact** screen. New contact is added.
- **About:** The options **EULA**, **Open source licenses** and **About Messenger** are displayed.
- **Settings:**
 - Enable **Read Receipts** to show when you have read a message.
 - Select **Message Expiration**. Turn ON the toggle button to apply an expiration to a direct message with a long press on the **Send** button.
 - Select **If not received message will expire** and you can set the time frame for the message expire. The following are the options available: 30 seconds, 1 minute, 2 minutes, 5 minutes, 10 minutes, and 30 minutes.


4. Select **Contacts and Group** tab.

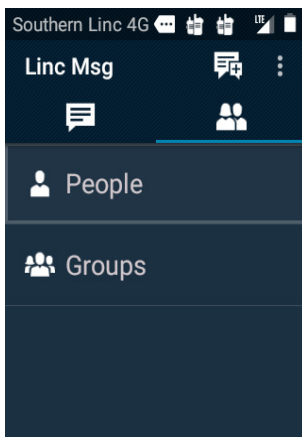


- Select **People**. You can search for a required contact from the contact list.

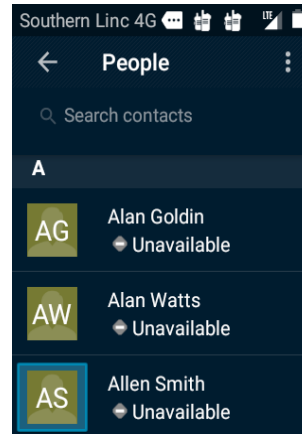

- Select **Groups**. You can search for a required group from the list.

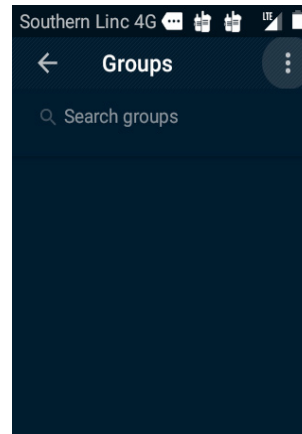



Select **Options** () on **People** and **Groups** screens. Select **Change group list**. Group list selection screen is displayed. You can change the group list.


SONIM SCOUT

Sonim SCOUT is a solution that allows the user to register with Sonim and use a number of key enterprise features.

Sonim Cloud account required to fully utilize SCOUT capabilities. For more information, visit <http://www.sonimcloud.com>.

To access Sonim Scout,


- From **Home** screen, select **Menu** () > **Sonim Scout** ().

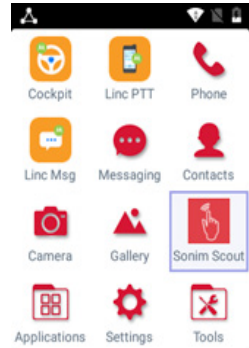

SETUP

Setup tab consists of the following features:


- SonimSetupWizard
- SafeGuard
- App Updater

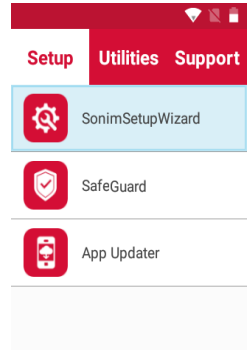

UTILITIES

Utilities tab consists of the following features:


- Contact Transfer
- Sonim BLE Connect

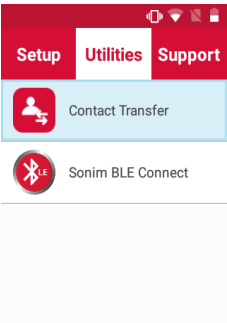

SUPPORT




Support tab consists of the following features:

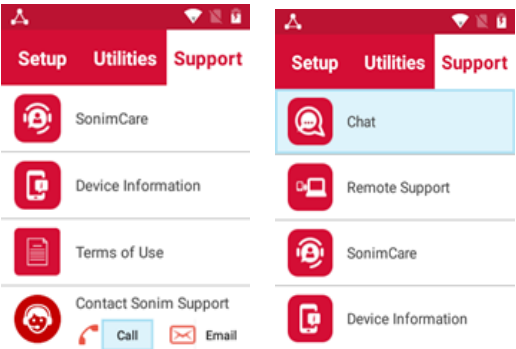- Chat
- Remote Control
- SonimCare
- Device Information
- Contact Sonim Support
 - Call
 - Email



APPLICATIONS




BROWSER

1. From **Home** screen, select **Menu** () > **Application** () > **Browser** ().
2. Enter the URL to search for the required information or any website.

CALENDAR

The Calendar helps you to set appointments, schedule reminders and alerts and repeat them if required. You can also view your saved tasks on a daily or weekly basis.

To access calendar;

1. From **Home** screen, select **Menu** () > **Application** () > **Calendar** ().
2. To change the calendar view, choose **Month** or **Agenda** from **Options** menu.
3. Select **Options** key to view the list of the following available options:
 - **Today:** Access current date events.
 - **New event:** New event can be added on selecting this option.
 - **Agenda:** Select each agenda and to view the event details.
 - **Search:** You can search for a particular event.
 - **Delete Events:** Select the **event** > **Option key** > **Done** to delete the selected event. Select **Select all** to delete all the events.When you have a event the **Delete event** option is enabled.
- **Settings:**
 - Displays the **General settings** of the calendar.
 - Displays the **Build version** in **About Calendar**.

MUSIC

You can play music files and voice memos stored in your phone using the music application.

From **Home** screen, select **Menu** () > **Applications** () > **Music** ().




- Select **Artists** to view the music files sorted based on the artists.
- Select **Albums** to view the music files sorted based on the albums.
- Select **Songs** to view the complete list of songs stored in your phone.
- Select **Playlists** to access the default playlists in the


music folder.

- Select **Recently added** playlist to view the music files that are recently added to the music folder.
- Select **My recordings** playlist to access all your voice memo files.

FM RADIO

You can listen to the radio through FM radio. A wired Headset should be connected to enabling FM radio.

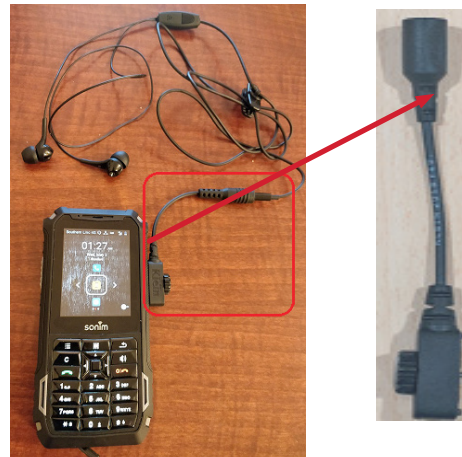


1. To listen to the radio, select **Menu** () > **Applications** () > **FM Radio** ().
2. A pop-up message is displayed; **Connect Headset**. Connect a wired Headset with the side connector to enable FM Radio. **FM radio** icon is displayed on the **Notification** bar.
- **Side Connector:** As the Sonim XP5s device does not support an earpiece jack, use the side connector to plug in your wired headset in order to listen to the FM radio.



3. Select **Options** > **Auto Scan** to scan all the stations. Available channels are displayed.
4. Select **Options** > **Setting** and the following options are displayed:
 - Regional Band
 - Audio Output Mode
 - Alternate Frequency
 - Revert to Factory Defaults

FILE EXPLORER

You can view/edit/delete/share the files stored in the phone through **File Explorer** ().

To view the files, select **Menu** () > **Applications** () > **File Explorer** ().

Select any folder and press **Option key** to view the following options:

- **Recent:** Displays the recent files captured or stored.
 - **Share:** Share the file or folder via Messaging/Bluetooth.
 - **Delete:** Delete the existing folder.
 - **Copy to:** Copy the contents of the folder.
 - **Move to:** Move the contents of folder.
 - **Properties:** View the properties of the folder.
 - **Select:** Select a particular folder.
 - **Downloads:** Displays the downloaded files.
 - **Exit:** You can select Exit option for exiting from File Explorer.
- **Downloads:** Displays the different folder under Downloads.
 - **Share:** Share the file or folder via Messaging/Bluetooth.
 - **Delete:** Delete the existing folder.
 - **Copy to:** Copy the contents of the folder.
 - **Move to:** Move the contents of folder.
 - **Rename:** Rename the existing folder.
 - **Properties:** View the properties of the folder.
 - **Select:** Select a particular folder.
 - **Sort by:** You can sort the folder using **Sort** option. Sorting options are; **By Name**, **By Date Modified** and **By Size**.
 - **New folder:** You can create a new folder.
 - **Exit:** You can select **Exit** option for exiting from File Explorer.
- **XP5800:** Displays the different folder in the device drive.
 - **Search:** Search for the file and folder.
 - **Delete:** Delete the existing folder.
 - **Copy to:** Copy the contents of the folder.
 - **Move to:** Move the contents of folder.
 - **Rename:** Rename the existing folder.
 - **Properties:** View the properties of the folder.
 - **Select:** Select a particular folder.
 - **Sort by:** You can sort the folder using **Sort** option. Sorting options are; **By Name**, **By Date Modified** and **By Size**.
 - **New folder:** You can create a new folder.
 - **Exit:** You can select **Exit** option for exiting from File Explorer.






If SD card is inserted, all the files in the SD card can be view/edit/delete/share from File Explorer.

BACKUP AND RESTORE

You can backup your phone data to one or more of your Google accounts using Android backup services. If you need to replace your device or erase its data, you can restore your data for any accounts that were previously backed up.

To back up your data,

1. From **Home** screen, select **Menu** () > **Applications** ().
2. Select **Backup and Restore** ().
3. Enable the option **Back up my data**.
All your contacts, Calendar, SMS and MMS data will be backed up and media content like photos, audio and videos are moved to SD card.

A warning message is displayed **Backup may take few minutes. Please do not perform other operations during this time.**

Select OK to start the backup.




4. Select **Restore**.
The contacts, Calendar, SMS and MMS are restored.



Without SD card, the user cannot take device back-up.

DOWNLOADS





Use the Downloads screen to view, open, or delete the downloaded files.

1. From **Home** screen, select **Menu** () > **Applications** ().
2. Select **Downloads** ().
3. Select **Options > Select** to select the downloaded file to be opened, viewed or deleted.

TOOLS





CLOCK

You can view the time of major cities in different time zones using this function.

1. From **Home** screen, select **Menu** () > **Tools** ().
2. Select **Clock** ().
3. Select **World clock icon** () located on the top of the screen. To add a city, select **Option key** > **Add city**. Select the check boxes next to the cities to add them to the **Clock**.
Added cities are listed in alphabetical order.
 - The local time in the home city is displayed in the upper half of the screen.
 - To set the home city, select the required city from the list. It is added to the selected cities list. The selected city is set as the home city.

ALARM

You can set an alarm for a particular time.

1. From **Home** screen, select **Menu** () > **Tools** ().
2. Select **Clock** ().
3. Select **Alarm** activation icon () on the top of the screen.
4. Select **Option key** > **Add** to add a new alarm.
5. To set a recurring alarm, select **Option key** > **Edit**. You can choose and set the following options:
 - **Time:** You can set the required time.
 - **Repeat:** You can select the days in a week to repeat the alarm.
 - **Alarm Ringtone:** Select the alarm ringtone.
 - **Label:** You can name the alarm.
 - **Vibrate:** You can enable the device to vibrate when the alarm is set.
6. Select any of the ringtones from the **Default alarm tone sound** present, and select **OK**.
7. Select **Option key** > **Save** to save the changes.







The alarm will work even when the phone is set in silent mode.

STOPWATCH




1. From **Home** screen, select **Menu** () > **Tools** ().
2. Select **Clock** () > **Stop watch** ().
3. Select **START** and **STOP** to run the stopwatch.

TIMER

1. From **Home** screen, select **Menu** () > **Tools** ().
2. Select **Clock** () > **Timer** ().
3. The following actions can be performed:
 - RESET
 - START
 - STOP
 - LAP

CALCULATOR







The default calculator in this phone is designed to perform simple mathematical calculations and the advanced panel for scientific calculations.

1. From **Home** screen, select **Menu** () > **Tools** () > **Calculator** ().
 - To enter the numbers, select the numeric keys.
 - To use mathematical operators, select the respective operation key on the keypad.
 - Select = for the final result.
2. Select **Option key** > **Advanced panel** for scientific calculations. You can toggle between Basic panel and Advanced panel.

SOUND RECORDER

You can record voice memos using the sound recorder.

To access the sound recorder,




- From **Home** screen, select **Menu** () > **Tools** () > **Sound Recorder** ().
 - To record an audio file, select **Record** ().
 - To stop the recording, select **Stop** ().
 - To pause the recording, select **Pause** ().
 - To save the voice memo, press left arrow key and select **Save**.
 - To exit without saving, press left arrow key and select **Discard**.
 - To play the recorded file instantly, press right arrow key and select the file to be played. Press the **center** key to play the voice memo.
 - **Delete:** Delete the existing folder.
 - **Copy to:** Copy the contents of the folder.
 - **Move to:** Move the contents of the folder.
 - **Rename:** Rename the existing folder.
 - **Properties:** View the properties of the folder.
 - **Select:** Select a particular folder.
 - **Sort by:** You can sort the folder using **Sort** option. Sorting options are; **By Name**, **By Date Modified** and **By Size**.
 - **New folder:** You can create a new folder.

SIM TOOLKIT

SIM Toolkit commonly known as STK **which enables the SIM to initiate actions which can be used for various value added services.**

It displays the Operator specific services.





To access the SIM Toolkit,

1. From **Home** screen, select **Menu** () > **Tools** () > **SIM Toolkit** ().
2. It shows **My number** which is SIM card's MSISDN. The number includes a country code and National Destination Code which identifies the subscriber's operator.
3. It also displays the SIM provider and the respective services details.

OTHER APPLICATIONS

CAMERA

The Sonim XP5s has a rear camera with 5MP fixed focus for taking pictures. The pictures are saved in the **Gallery**.

1. From **Home** screen, select **Menu** () > **Camera** ().
2. Select Camera mode to set the following modes:
 - **Normal** (): To shoot a picture in normal mode, press **center** key to capture the picture. Use Left and Right navigation keys for Zoom in and Zoom out.
 - **Video** (): Press **center** key to start/stop a video recording. You cannot pause the recording in the middle.
3. Select Option key to view or change camera settings such as **Flash**, **Exposure**, and **File Format** etc.

GALLERY

The pictures, videos, and screenshots captured from the camera are stored in **Gallery** and can be viewed later.

From **Home** screen, select **Menu** () > **Gallery** ().

You can view the photo album, screenshots, and the individual pictures.

REGULATORY INFORMATION - USA MARKET

RF EXPOSURE INFORMATION (SAR)

This device meets the government's requirements for exposure to radio waves.

This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The exposure standard for wireless device employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. *Tests for SAR are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. This is because the device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

The highest SAR value for the model device XP8800 (Type number PL2115) as reported to the FCC:

- when tested for use at the ear is 0.98 W/kg, and
- when worn on the body, as described in this user guide, is 1.35 W/kg (Body-worn measurements differ among device models, depending upon available accessories and FCC requirements.), and

While there may be differences between the SAR levels of various devices and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this model device with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model device is on file with the FCC and can be found under the Display Grant section of www.fcc.gov/oet/ea/fccid after searching on FCC ID: WYPPG2132.

For body worn operation, this device has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and be positioned

positioned a minimum of 1.5cm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines. If you do not use a body-worn accessory and are not holding the device at the ear, position the handset a minimum of xxxcm from your body when the device is switched on.

FEDERAL COMMUNICATION COMMISSION INTERFERENCE STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC CAUTION

- Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any

other antenna or transmitter.

- The country code selection is for non-US model only and is not available to all US model. Per FCC regulation, all Wi-Fi product marketed in US must fixed to US operation channels only.
- Operations in the 5.15-5.25GHz band are restricted to indoor usage only.

ISED RF EXPOSURE STATEMENT (IC)

This EUT is compliance with SAR for general population/uncontrolled exposure limits in IC RSS-102 and had been tested in accordance with the measurement methods and procedures specified in IEEE 1528 and IEC 62209. This equipment should be installed and operated with minimum distance 1.0 cm between the radiator and your body. This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

Cet appareil est conforme aux limites d'exposition DAS incontrôlée pour la population générale de la norme CNR-102 d'Industrie Canada et a été testé en conformité avec les méthodes de mesure et procédures spécifiées dans IEEE 1528 et IEC 62209. Cet appareil doit être installé et utilisé avec une distance minimale de 1.0 cm entre l'émetteur et votre corps. Cet appareil et sa ou ses antennes ne doivent pas être co-localisés ou fonctionner en conjonction avec tout autre antenne ou transmetteur.

HAC RATING

The FCC has created a rating system for cellular phones regarding their HAC-related performance. This rating helps consumers with hearing disabilities to find phones that work well with their hearing aid devices. The HAC rating and measurement procedure are described in the American National Standards Institute (ANSI C63.19-2011) contains two rating standards: an "M" rating from 1 to 4 for hearing aids operating in microphone mode, and a "T" rating from 1 to 4 for hearing aids operating in tele coil mode. M-Rating stands for Microphone rating and indicates the amount of reduction of RF interference between the telephone and the hearing aid in acoustic coupling mode (also called microphone mode). Phones rated M3 or M4 meet FCC requirements and generate less interference to hearing devices set in microphone mode. T-Rating stands for tele coil rating and represents inductive coupling with hearing aids that are operating in telecoil mode. A tel coil is a small piece of tightly wrapped wire, built into some hearing aids. While the microphone of a hearing aid picks up all sounds,

the telecoil only picks up an electromagnetic signal from the telephone. Thus, users of telecoil-equipped hearing aids are able to communicate over the telephone without the amplification of unwanted background noise. Phones rated T3 or T4 meet FCC requirements and generate less interference to hearing devices set in telecoil mode. A combination of M-rating and T-rating defines the final HAC rating and is a deciding factor in selecting cellular phones for people with hearing problems. A HAC compliant phone could be rated:

- M3/T3
- M3/T4
- M4/T3
- M4/T4

its resistance to interference. The best way to evaluate the suitability of the phone is to try it with the intended hearing aid device.

The model XP5800 have been tested for hearing aid device compatibility and complies with the Federal Communications Commission (FCC) requirements.

These devices are rated M3/T4.

HAZARDOUS LOCATION USAGE WARNING

Determine by inspection that the following information is made available to the user by one or more of;

1. Printed on the label for the battery
2. Printed on the label for the host device, (c) Printed in the owner's manual, and/or (d) Posted in a help file or Internet web site.



Do not disassemble or open crush, bend or deform, puncture or shred.



Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion or other hazard.



Only use the battery for the system for which it is specified.



Only use the battery with a charging system that has been qualified with the system per CTIA Certification Requirements for Battery System Compliance to IEEE 1725. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazard.



Do not short circuit a battery or allow metallic conductive objects to contact battery terminals.



Replace the battery only with another battery that has been qualified with the system per this standard, IEEE-Std-1725. Use of an unqualified battery may present a risk of fire, explosion, leakage or other hazard. Only authorized service providers shall replace battery. (If the battery is non-user replaceable).



Do not short circuit a battery or allow metallic conductive objects to contact battery terminals.



Promptly dispose of used batteries in accordance with local regulations.



Battery usage by children should be supervised.



Avoid dropping the phone or battery. If the phone or battery is dropped, especially on a hard surface, and the user suspects damage, take it to a service center for inspection.



Improper battery use may result in a fire, explosion or other hazard.

A

Accessibility 28
AetherPal 28
Airplane Mode 21
Alarm
 Timer 44
APP
 Force Stop 25
Applications 42, 46
APPs 24

B

Battery 9
Bluetooth
 Pairing 21
Browser 42

C

Calculator 44
Call Back Request 38
Call Settings 32
Camera 46
Cockpit 36
Contacts 29

D

Date & Time 28
Device Settings 23
Display 23
Downloads 43

E

Emergency Info 26
Emergency Target 37
Export 30

F

Factory Reset 27
FCC 47
File Explorer 42
FlexT9 27
Forget Network 20

G

Gallery 46
Gesture 25

H

HAC 48
Hazardous Location 49
Home Screen Shortcuts 26
Hot Mic 37

I

Import 30
ISED RF Exposure Statement 48

K

Keyboard Dictionaries 41

L

Language & Input 27
Linc Messages 38
Linc Msg 39
Location 26

M

Memory
 App usage 25, 34, 35
Messages 34
Missed Events 19
Modify Network 20
Mono Audio 28
My Notifications 18

N

Network Settings Reset 22
Noise Cancellation
 FENS 24
Notification 24

P

Phone Specifications 11
Power OFF 25
Power ON 25

Q

Quick Profile Switch 24

Quick Settings 19

R

Restore 43

S

SAR 47

Scanning 37

Search 18

Security 26

Setup Wizard 41

Side Connector 42

SIP 32

Sonim XP5s 12

Sound 23

Sound Recorder 44

Speech Pitch 27

Speech Rate 27

Stealth Profile 24

Storage

Internal Share 25, 27, 35

System 28

T

Talkback 28

Toggle Torch 25

Tools 44

U

USB Power Saving 25

W

Wallpaper 18

Wi-Fi 20